

Haier

Power	A "Power" button																								
	<ul style="list-style-type: none"> Push the "Power" button to switch on the power. Under power-on mode, push it to switch off the power. Push the "Power" button to switch on the power. If the "Start/Pause" button is not pushed, the machine will switch off the power automatically after 5 minutes. 																								
START/PAUSE	B "Start/Pause" button																								
	<ul style="list-style-type: none"> After the power is switched on, press it to start the machine. During working, push it to pause. During pause, push it to restart and go on working. 																								
Program	C "Program" button																								
	<table border="1"> <thead> <tr> <th>Program</th> <th>Application</th> <th>Normally on</th> <th>Application</th> </tr> </thead> <tbody> <tr> <td>Wash</td> <td>Just run the washing cycle without drainage cycle. The detergent was left in the tub and can be recycled.</td> <td>Normal</td> <td>Recommended for mixed fabrics and general clothing items.</td> </tr> <tr> <td>Rinse</td> <td>Remove the left detergent from the clothes and then rinse the clothes.</td> <td>Normal</td> <td>Ideal Cleaning Program: Hair Recommendations to use Ariel Cycle for best stain removal in 1 wash.</td> </tr> <tr> <td>Spin</td> <td>Start extraction program when the wash program ends or the clothes are wet.</td> <td>Soak</td> <td>Washing the relatively big thick or very dirty laundry.</td> </tr> <tr> <td>Tub Dry</td> <td>The purpose is drying the inner tub and the outer tub which can avoid growing mildew.</td> <td>Delicate</td> <td>Washing for light-soil saving laundries.</td> </tr> <tr> <td></td> <td></td> <td>Quick</td> <td>Quick washing for normal laundries.</td> </tr> </tbody> </table>	Program	Application	Normally on	Application	Wash	Just run the washing cycle without drainage cycle. The detergent was left in the tub and can be recycled.	Normal	Recommended for mixed fabrics and general clothing items.	Rinse	Remove the left detergent from the clothes and then rinse the clothes.	Normal	Ideal Cleaning Program: Hair Recommendations to use Ariel Cycle for best stain removal in 1 wash.	Spin	Start extraction program when the wash program ends or the clothes are wet.	Soak	Washing the relatively big thick or very dirty laundry.	Tub Dry	The purpose is drying the inner tub and the outer tub which can avoid growing mildew.	Delicate	Washing for light-soil saving laundries.			Quick	Quick washing for normal laundries.
Program	Application	Normally on	Application																						
Wash	Just run the washing cycle without drainage cycle. The detergent was left in the tub and can be recycled.	Normal	Recommended for mixed fabrics and general clothing items.																						
Rinse	Remove the left detergent from the clothes and then rinse the clothes.	Normal	Ideal Cleaning Program: Hair Recommendations to use Ariel Cycle for best stain removal in 1 wash.																						
Spin	Start extraction program when the wash program ends or the clothes are wet.	Soak	Washing the relatively big thick or very dirty laundry.																						
Tub Dry	The purpose is drying the inner tub and the outer tub which can avoid growing mildew.	Delicate	Washing for light-soil saving laundries.																						
		Quick	Quick washing for normal laundries.																						
Delay	D "Delay" button																								
	<ul style="list-style-type: none"> During operation, the digital tube will display the remained time (hours). Push down the delay button. The delay indicator light is on, the digital displays the delay time of finishing washing (in hour). The point light flashes to indicate in the reverse mode. 																								
Water Level	E "Water Level" button																								
	<ul style="list-style-type: none"> During the Normal cycles, the washing machine will detect the size of the laundry and automatically select the water level between levels 4, 6 or 8. To change the water level, press the Start/Pause button and make your selection by pressing the "Water Level" button until desired level is shown (1-8). If there is water inside the tub and the machine cannot detect the laundry load, it will display water level "4". If there is wet clothes in the tub, it may display water level "8", you must select suitable water level by yourself. During operation of the wash, or rinse program, you can adjust the water level by pressing the Water Level button. The water level of the Soft/Blanket cycles can differ between 2-6. The water level may vary due to the different moisture level of the laundry items. 																								
Program	C "Program" button for 698 & 528 Series																								
	<table border="1"> <thead> <tr> <th>Flash</th> <th>Application</th> <th>Normally on</th> <th>Application</th> </tr> </thead> <tbody> <tr> <td>Heavy</td> <td>To clean very dirty clothes</td> <td>Normal</td> <td>Use this cycle for normally soiled cottons and mixed fabric loads.</td> </tr> <tr> <td>Eco</td> <td>Energy saving program</td> <td>Strong</td> <td>Use this cycle for heavily soiled durable garments.</td> </tr> <tr> <td>Wool</td> <td>Machine washable woolen items</td> <td>Standard</td> <td>This cycle is for national energy efficiency standards testing.</td> </tr> <tr> <td>Silk</td> <td>To wash silk clothes</td> <td>Quick</td> <td>Quick washing for normal laundries.</td> </tr> <tr> <td>Kids Wear</td> <td>To clean kids clothes</td> <td></td> <td></td> </tr> </tbody> </table>	Flash	Application	Normally on	Application	Heavy	To clean very dirty clothes	Normal	Use this cycle for normally soiled cottons and mixed fabric loads.	Eco	Energy saving program	Strong	Use this cycle for heavily soiled durable garments.	Wool	Machine washable woolen items	Standard	This cycle is for national energy efficiency standards testing.	Silk	To wash silk clothes	Quick	Quick washing for normal laundries.	Kids Wear	To clean kids clothes		
Flash	Application	Normally on	Application																						
Heavy	To clean very dirty clothes	Normal	Use this cycle for normally soiled cottons and mixed fabric loads.																						
Eco	Energy saving program	Strong	Use this cycle for heavily soiled durable garments.																						
Wool	Machine washable woolen items	Standard	This cycle is for national energy efficiency standards testing.																						
Silk	To wash silk clothes	Quick	Quick washing for normal laundries.																						
Kids Wear	To clean kids clothes																								

Function	D,F,G,H,I button																																							
	<ul style="list-style-type: none"> To adjust the water level, spin time, rinse times, wash time, soak time and other parameters. 																																							
Function	K "Function" button																																							
	<ul style="list-style-type: none"> To choose 1 wash, Air Dry and Reserve water function. 																																							
Program	C "Program" button for 789 Series																																							
	<table border="1"> <thead> <tr> <th>Flash</th> <th>Application</th> <th>Normally on</th> <th>Application</th> </tr> </thead> <tbody> <tr> <td>Deep clean</td> <td>To clean very dirty clothes</td> <td>Normal</td> <td>Use this cycle for normally soiled cottons and mixed fabric loads.</td> </tr> <tr> <td>Delicate</td> <td>Washing for light-soil saving laundries</td> <td>Strong</td> <td>Use this cycle for heavily soiled durable garments.</td> </tr> <tr> <td>Wool</td> <td>Machine washable woolen items</td> <td>Standard</td> <td>This cycle is for standard energy efficiency testing.</td> </tr> <tr> <td>Silk</td> <td>To wash silk clothes</td> <td>Quick</td> <td>Quick washing for normal laundries.</td> </tr> </tbody> </table>	Flash	Application	Normally on	Application	Deep clean	To clean very dirty clothes	Normal	Use this cycle for normally soiled cottons and mixed fabric loads.	Delicate	Washing for light-soil saving laundries	Strong	Use this cycle for heavily soiled durable garments.	Wool	Machine washable woolen items	Standard	This cycle is for standard energy efficiency testing.	Silk	To wash silk clothes	Quick	Quick washing for normal laundries.																			
Flash	Application	Normally on	Application																																					
Deep clean	To clean very dirty clothes	Normal	Use this cycle for normally soiled cottons and mixed fabric loads.																																					
Delicate	Washing for light-soil saving laundries	Strong	Use this cycle for heavily soiled durable garments.																																					
Wool	Machine washable woolen items	Standard	This cycle is for standard energy efficiency testing.																																					
Silk	To wash silk clothes	Quick	Quick washing for normal laundries.																																					
Process	E "Process" button																																							
	<ul style="list-style-type: none"> To select water level, wash time, rinse times, spin time and 1 WASH. When the process is selected, push DIY button and then adjust the parameters. Push process button for 3S and then enter 1 WASH process. After selecting favorite programs and parameters, the user push Start/Pause button and the machine will record user's favorite programs and parameters. The user can use the recorded settings to wash clothes next time. To adjust the water level, wash time, rinse times and other parameters. 																																							
Program	G "Cycle" Knob for 678 Series																																							
	<table border="1"> <thead> <tr> <th>Program</th> <th>Washing Cotton laundries</th> <th>Recommend</th> </tr> </thead> <tbody> <tr> <td>Cotton</td> <td>Washing Cotton laundries</td> <td></td> </tr> <tr> <td>Eco</td> <td>The cycle of energy saving</td> <td></td> </tr> <tr> <td>Express</td> <td>Lightly soiled or small laundry loads less than 1.5kg</td> <td></td> </tr> <tr> <td>Sports</td> <td>Washing Sports clothes</td> <td></td> </tr> <tr> <td>Wool</td> <td>Machine washable woolen items</td> <td></td> </tr> <tr> <td>Heavy</td> <td>Heavy Washing</td> <td></td> </tr> <tr> <td>Anti Crease</td> <td>Washing t-shirts, shirts laundries</td> <td></td> </tr> <tr> <td>Delicate</td> <td>Delicate items that are machine washable</td> <td></td> </tr> <tr> <td>Blanket</td> <td>Washing Blanket</td> <td></td> </tr> <tr> <td>Towels</td> <td>Washing Towels</td> <td></td> </tr> <tr> <td>Baby care</td> <td>Washing baby's clothes</td> <td></td> </tr> <tr> <td>Tub Clean</td> <td>Cleaning the inner and outer tub to avoid the growth of mildew</td> <td></td> </tr> </tbody> </table>	Program	Washing Cotton laundries	Recommend	Cotton	Washing Cotton laundries		Eco	The cycle of energy saving		Express	Lightly soiled or small laundry loads less than 1.5kg		Sports	Washing Sports clothes		Wool	Machine washable woolen items		Heavy	Heavy Washing		Anti Crease	Washing t-shirts, shirts laundries		Delicate	Delicate items that are machine washable		Blanket	Washing Blanket		Towels	Washing Towels		Baby care	Washing baby's clothes		Tub Clean	Cleaning the inner and outer tub to avoid the growth of mildew	
Program	Washing Cotton laundries	Recommend																																						
Cotton	Washing Cotton laundries																																							
Eco	The cycle of energy saving																																							
Express	Lightly soiled or small laundry loads less than 1.5kg																																							
Sports	Washing Sports clothes																																							
Wool	Machine washable woolen items																																							
Heavy	Heavy Washing																																							
Anti Crease	Washing t-shirts, shirts laundries																																							
Delicate	Delicate items that are machine washable																																							
Blanket	Washing Blanket																																							
Towels	Washing Towels																																							
Baby care	Washing baby's clothes																																							
Tub Clean	Cleaning the inner and outer tub to avoid the growth of mildew																																							

Operating procedure

- Push the **Power** button to switch on the power.
- Push the **Program** button to select suitable automatic program.
- Push the **Water Level** button, select suitable water level.
- Push the **Process** button, select suitable procedure.
- Push the **Delay** button to select suitable reserve wash program.
- Push the **DIY** button to select suitable water level, wash time, rinse times and spin time.
- Push the **Start/Pause** button, close the top lid.
- Push the **Spin/Rinse/Wash/Soak** button to select the suitable time or times.
- Push the **Child Lock** button to set function.
- Push the **Function** button to select 1 Wash, Air Dry, Reserve Water.

- Push the **Start/Pause** button, close the top lid.
 - Soak Time "Spin Time"
 - Each program can be changed the Soak Time, Rinse, Spin Time except wool, Soft Wash Blanket and Drum clean. Express cannot change the So Time and Drum clean cannot change these buttons.
 - Progress button
 - You may change the Progress when Cotton, Eco, Sports, Heavy Delicates Towels Baby Care cycles are selected.
 - You cannot change the Progress When Express, Drum Clean, Wool, Soft Wash and Blanket are selected.
- ### Finish washing
- The machine will beep to indicate the end of the cycle then automatically cut the power off.
- ### After washing
- Please first pull off the power plug from the receptacle before cleaning.
 - After using, please clean the lint and foreign materials of the lint filter and overflow filter in time. Otherwise it may influence your using the machine.
 - The lint filter must be used during each wash.
 - It must be cleaned in time after each using.
 - Swap the rubbish in the lint filter.
 - Put the back cover of the lint filter into the front cover (Figure 2).
 - Put the lint filter into filter cover, and make it tight.
 - Make sure the lint filter is well installed, or it can influence your use.
 - If the cabinet is dirty, wipe it with wet cloth.
 - Do not flush it directly with water.
 - Wipe it with neutral detergent.
 - Do not wet it with thinner, petrol, alcohol etc.
- After washing, close the water faucet. (If needed, you can dismantle the water inlet hose.)
 - Do not store water in the washing machine for a long period. Drain the water completely after each using.
 - Be sure to pull off the power plug before maintenance.
 - Hang up the power cord and drain hose.
 - Wipe off the water drops on the surface of the machine and inside the tub. Open the top lid for some time (about 1 hour), then close the top lid.

HWM60-1269DB Series	HWM70-789NZP Series
HWM60-707NZP Series	HWM70-826NZP Series
HWM62-707NZP Series	HWM70-278NZP Series
HWM62-707E Series	HWM72-678NZP Series
HWM62-AE/FE Series	HWM75-707NZP Series
HWM65-707NZP Series	HWM75-678NZP Series
HWM65-698NZP Series	HWM78-789NZP Series
HWM65-826NZP Series	HSW82-789NZP Series
HWM70-707NZP Series	HSW82-528NZP Series
HWM70-698NZP Series	HWM85-678NZP Series

Please read this manual carefully before using washing machine.
Retain it for future reference.



P/No.: 0030515862C
Rev. No.: 00_08/02/2020

Haier Customer Care Toll Free (24x7): 1800-419-9999, 1800-102-9999
Website: www.haier.com/in www.facebook.com/haierindia

Trouble shooting Answer to question

If there's breakdown, please pull off the power plug before checking. The following phenomena are not breakdown sometimes. Please confirm again before sending it to repair.
If there are real breakdown, please come to the special maintenance department or after-sale service department of our company. Do not repair it by yourself.

Phenomena	The reason	How to settle
The digital displays E2	<ul style="list-style-type: none"> The top lid is not closed. Close the top lid or close the top lid and press the START/PAUSE button. 	
Rinse	<ul style="list-style-type: none"> Is the drain hose blocked? Remove the blockage. Press the Start/Pause button once. 	
Wash	<ul style="list-style-type: none"> Close the top lid. Press the Start/Pause button once. 	
Rinse	<ul style="list-style-type: none"> Has the laundry been placed unevenly in the machine? Redistribute the load evenly. Press the Start/Pause button. 	
Spin	<ul style="list-style-type: none"> Is the machine level? Level the machine. Please contact Customer Care. 	
Wash	<ul style="list-style-type: none"> The water level sensor has failed. Level the machine. Please contact Customer Care. 	
Rinse	<ul style="list-style-type: none"> The water top is not open. Open the top. Press the Start/Pause button once. 	
Spin	<ul style="list-style-type: none"> The water inlet valve is blocked. Clean the water inlet valve. Press the Start/Pause button Wait for the normal water pressure before use. 	
Wash	<ul style="list-style-type: none"> The water pressure is too low and the current is too small. Open the top. Press the Start/Pause button once. Clean the water inlet valve. Press the Start/Pause button Wait for the normal water pressure before use. 	
No or slow drain, the digital displays E1, E3, E4, E5, E6, E7, E8, E9, E10, E11, E12, E13, E14, E15, E16, E17, E18, E19, E20, E21, E22, E23, E24, E25, E26, E27, E28, E29, E30, E31, E32, E33, E34, E35, E36, E37, E38, E39, E40, E41, E42, E43, E44, E45, E46, E47, E48, E49, E50, E51, E52, E53, E54, E55, E56, E57, E58, E59, E60, E61, E62, E63, E64, E65, E66, E67, E68, E69, E70, E71, E72, E73, E74, E75, E76, E77, E78, E79, E80, E81, E82, E83, E84, E85, E86, E87, E88, E89, E90, E91, E92, E93, E94, E95, E96, E97, E98, E99, E100, E101, E102, E103, E104, E105, E106, E107, E108, E109, E110, E111, E112, E113, E114, E115, E116, E117, E118, E119, E120, E121, E122, E123, E124, E125, E126, E127, E128, E129, E130, E131, E132, E133, E134, E135, E136, E137, E138, E139, E140, E141, E142, E143, E144, E145, E146, E147, E148, E149, E150, E151, E152, E153, E154, E155, E156, E157, E158, E159, E160, E161, E162, E163, E164, E165, E166, E167, E168, E169, E170, E171, E172, E173, E174, E175, E176, E177, E178, E179, E180, E181, E182, E183, E184, E185, E186, E187, E188, E189, E190, E191, E192, E193, E194, E195, E196, E197, E198, E199, E200, E201, E202, E203, E204, E205, E206, E207, E208, E209, E210, E211, E212, E213, E214, E215, E216, E217, E218, E219, E220, E221, E222, E223, E224, E225, E226, E227, E228, E229, E230, E231, E232, E233, E234, E235, E236, E237, E238, E239, E240, E241, E242, E243, E244, E245, E246, E247, E248, E249, E250, E251, E252, E253, E254, E255, E256, E257, E258, E259, E260, E261, E262, E263, E264, E265, E266, E267, E268, E269, E270, E271, E272, E273, E274, E275, E276, E277, E278, E279, E280, E281, E282, E283, E284, E285, E286, E287, E288, E289, E290, E291, E292, E293, E294, E295, E296, E297, E298, E299, E300, E301, E302, E303, E304, E305, E306, E307, E308, E309, E310, E311, E312, E313, E314, E315, E316, E317, E318, E319, E320, E321, E322, E323, E324, E325, E326, E327, E328, E329, E330, E331, E332, E333, E334, E335, E336, E337, E338, E339, E340, E341, E342, E343, E344, E345, E346, E347, E348, E349, E350, E351, E352, E353, E354, E355, E356, E357, E358, E359, E360, E361, E362, E363, E364, E365, E366, E367, E368, E369, E370, E371, E372, E373, E374, E375, E376, E377, E378, E379, E380, E381, E382, E383, E384, E385, E386, E387, E388, E389, E390, E391, E392, E393, E394, E395, E396, E397, E398, E399, E400, E401, E402, E403, E404, E405, E406, E407, E408, E409, E410, E411, E412, E413, E414, E415, E416, E417, E418, E419, E420, E421, E422, E423, E424, E425, E426, E427, E428, E429, E430, E431, E432, E433, E434, E435, E436, E437, E438, E439, E440, E441, E442, E443, E444, E445, E446, E447, E448, E449, E450, E451, E452, E453, E454, E455, E456, E457, E458, E459, E460, E461, E462, E463, E464, E465, E466, E467, E468, E469, E470, E471, E472, E473, E474, E475, E476, E477, E478, E479, E480, E481, E482, E483, E484, E485, E486, E487, E488, E489, E490, E491, E492, E493, E494, E495, E496, E497, E498, E499, E500, E501, E502, E503, E504, E505, E506, E507, E508, E509, E510, E511, E512, E513, E514, E515, E516, E517, E518, E519, E520, E521, E522, E523, E524, E525, E526, E527, E528, E529, E530, E531, E532, E533, E534, E535, E536, E537, E538, E539, E540, E541, E542, E543, E544, E545, E546, E547, E548, E549, E550, E551, E552, E553, E554, E555, E556, E557, E558, E559, E560, E561, E562, E563, E564, E565, E566, E567, E568, E569, E570, E571, E572, E573, E574, E575, E576, E577, E578, E579, E580, E581, E582, E583, E584, E585, E586, E587, E588, E589, E590, E591, E592, E593, E594, E595, E596, E597, E598, E599, E600, E601, E602, E603, E604, E605, E606, E607, E608, E609, E610, E611, E612, E613, E614, E615, E616, E617, E618, E619, E620, E621, E622, E623, E624, E625, E626, E627, E628, E629, E630, E631, E632, E633, E634, E635, E636, E637, E638, E639, E640, E641, E642, E643, E644, E645, E646, E647, E648, E649, E650, E651, E652, E653, E654, E655, E656, E657, E658, E659, E660, E661, E662, E663, E664, E665, E666, E667, E668, E669, E670, E671, E672, E673, E674, E675, E676, E677, E678, E679, E680, E681, E682, E683, E684, E685, E686, E687, E688, E689, E690, E691, E692, E693, E694, E695, E696, E697, E698, E699, E700, E701, E702, E703, E704, E705, E706, E707, E708, E709, E710, E711, E712, E713, E714, E715, E716, E717, E718, E719, E720, E721, E722, E723, E724, E725, E726, E727, E728, E729, E730, E731, E732, E733, E734, E735, E736, E737, E738, E739, E740, E741, E742, E743, E744, E745, E746, E747, E748, E749, E750, E751, E752, E753, E754, E755, E756, E757, E758, E759, E760, E761, E762, E763, E764, E765, E766, E767, E768, E769, E770, E771, E772, E773, E774, E775, E776, E777, E778, E779, E780, E781, E782, E783, E784, E785, E786, E787, E788, E789, E790, E791, E792, E793, E794, E795, E796, E797, E798, E799, E800, E801, E802, E803, E804, E805, E806, E807, E808, E809, E810, E811, E812, E813, E814, E815, E816, E817, E818, E819, E820, E821, E822, E823, E824, E825, E826, E827, E828, E829, E830, E831, E832, E833, E834, E835, E836, E837, E838, E839, E840, E841, E842, E843, E844, E845, E846, E847, E848, E849, E850, E851, E852, E853, E854, E855, E856, E857, E858, E859, E860, E861, E862, E863, E864, E865, E866, E867, E868, E869, E870, E871, E872, E873, E874, E875, E876, E877, E878, E879, E880, E881, E882, E883, E884, E885, E886, E887, E888, E889, E890, E891, E892, E893, E894, E895, E896, E897, E898, E899, E900, E901, E902, E903, E904, E905, E906, E907, E908, E909, E910, E911, E912, E913, E914, E915, E916, E917, E918, E919, E920, E921, E922, E923, E924, E925, E926, E927, E928, E929, E930, E931, E932, E933, E934, E935, E936, E937, E938, E939, E940, E941, E942, E943, E944, E945, E946, E947, E948, E949, E950, E951, E952, E953, E954, E955, E956, E957, E958, E959, E960, E961, E962, E963, E964, E965, E966, E967, E968, E969, E970, E971, E972, E973, E974, E975, E976, E977, E978, E979, E980, E981, E982, E983, E984, E985, E986, E987, E988, E989, E990, E991, E992, E993, E994, E995, E996, E997, E998, E999, E1000, E1001, E1002, E1003, E1004, E1005, E1006, E1007, E1008, E1009, E1010, E1011, E1012, E1013, E1014, E1015, E1016, E1017, E1018, E1019, E1020, E1021, E1022, E1023, E1024, E1025, E1026, E1027, E1028, E1029, E1030, E1031, E1032, E1033, E1034, E1035, E1036, E1037, E1038, E1039, E1040, E1041, E1042, E1043, E1044, E1045, E1046, E1047, E1048, E1049, E1050, E1051, E1052, E1053, E1054, E1055, E1056, E1057, E1058, E1059, E1060, E1061, E1062, E1063, E1064, E1065, E1066, E1067, E1068, E1069, E1070, E1071, E1072, E1073, E1074, E1075, E1076, E1077, E1078, E1079, E1080, E1081, E1082, E1083, E1084, E1085, E1086, E1087, E1088, E1089, E1090, E1091, E1092, E1093, E1094, E1095, E1096, E1097, E1098, E1099, E1100, E1101, E1102, E1103, E1104, E1105, E1106, E1107, E1108, E1109, E1110, E1111, E1112, E1113, E1114, E1115, E1116, E1117, E1118, E1119, E1120, E1121, E1122, E1123, E1124, E1125, E1126, E1127, E1128, E1129, E1130, E1131, E1132, E1133, E1134, E1135, E1136, E1137, E1138, E1139, E1140, E1141, E1142, E1143, E1144, E1145, E1146, E1147, E1148, E1149, E1150, E1151, E1152, E1153, E1154, E1155, E1156, E1157, E1158, E1159, E1160, E1161, E1162, E1163, E1164, E1165, E1166, E1167, E1168, E1169, E1170, E1171, E1172, E1173, E1174, E1175, E1176, E1177, E1178, E1179, E1180, E1181, E1182, E1183, E1184, E1185, E1186, E1187, E1188, E1189, E1190, E1191, E1192, E1193, E1194, E1195, E1196, E1197, E1198, E1199, E1200, E1201, E1202, E1203, E1204, E1205, E1206, E1207, E1208, E1209, E1210, E1211, E1212, E1213, E1214, E1215, E1216, E1217, E1218, E1219, E1220, E1221, E1222, E1223, E1224, E1225, E1226, E1227, E1228, E1229, E1230, E1231, E1232, E1233, E1234, E1235, E1236, E1237, E1238, E1239, E1240, E1241, E1242, E1243, E1244, E1245, E1246, E1247, E1248, E1249, E1250, E1251, E1252, E1253, E1254, E1255, E1256, E1257, E1258, E1259, E1260, E1261, E1262, E1263, E1264, E1265, E1266, E1267, E1268, E1269, E1270, E1271, E1272, E1273, E1274, E1275, E1276, E1277, E1278, E1279, E1280, E1281, E1282, E1283, E1284, E1285, E1286, E1287, E1288, E1289, E1290, E1291, E1292, E1293, E1294, E1295, E1296, E1297, E1298, E1299, E1300, E1301, E1302, E1303, E1304, E1305, E1306, E1307, E1308, E1309, E1310, E1311, E1312, E1313, E1314, E1315, E1316, E1317, E1318, E1319, E1320, E1321, E1322, E1323, E1324, E1325, E1326, E1327, E1328, E1329, E1330, E1331, E1332, E1333, E1334, E1335, E1336, E1337, E1338, E1339, E1340, E1341, E1342, E1343, E1344, E1345, E1346, E1347, E1348, E1349, E1350, E1351, E1352, E1353, E1354, E1355, E1356, E1357, E1358, E1359, E1360, E1361, E1362, E1363, E1364, E1365, E1366, E1367, E1368, E1369, E1370, E1371, E1372, E1373, E1374, E1375, E1		

Contents

Name of Parts	1
Safety precautions	2
Installation and Adjustment	3
Preparation before washing	6
The musts in washing	7
Usage of detergent	7
Usage of the Operation Buttons	7
Operating Procedure	12
Finish washing	13
After washing	13
Trouble shooting answer to question	14
Specification	15
E-waste Guideline	16
Warranty Card	17

Name of Parts



Reference machine snap for all TL model

Notes: All illustrations in this manual are given for reference only. Your products and accessories may show differences from these illustrations due to our continuous improvement.

Meaning and description of the symbols

	Warning sign Contents marked with that symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the contents, otherwise it may cause damage of the machine or endanger the personal safety of the user.
	Forbidding sign Contents marked with that symbol are actions forbidden to perform. Performing of those actions may result in damage of the machine or endanger the personal safety of the user.

* Please check if the power receptacle has good earthing condition before using to guarantee your safety.

Safety precautions

- Do not stretch hands into the working machine. It is dangerous even if the rotation is slow. Take special care of the children. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not decompose, repair or alter the machine by yourself.
- Do not put any hot or heavy items (such as the kettle with hot water) on the washing machine.
- Do not wash laundries with volatile materials (such as thinner, petrol etc.).
- The children shall not approach the working washing machine.
- Keep the machine away from direct sunlight and heat source like the heater.
- The lint filter shall be kept in good condition, and installed to proper position. If the lint filter is lost or damaged, please contact the local after-sales service department of our company.
- Please plug in the power cord on special receptacle with rated voltage. Be sure to use single phase three pins receptacle. The earthing terminal of the receptacle must be earthed reliably. If possible, please adopt electric leakage protector.
- The washing machine must be positioned so that the plug is accessible. Be sure to pull the plug off and close the water faucet in following cases: power failure, delivering the machine, setting the machine idle or cleaning the machine.
- Do not plug in or pull out the power plug with wet hand.
- Do not bend, extend, twist, bind by force. Do not press or rip it with weight.
- Keep the pin of the power plug clean, if the power plug is polluted with dust, please wipe with dry cloth carefully.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- *Motor used in machine is having Thermal Overload protection. So, in case of excessive heating, motor might trip and stop for cooling. In such case, it is suggested to wait till the temperature goes down before starting.

Usage of Drain Hose

The drainage shall be smooth with the drain hose.

- The drain hose should be installed at height less than 10cm for smooth drainage.
- Do not trample or press the drain hose.
- If the drain hose is too long, cut it at mid point. To make smooth drainage, cut the front end of the hose slantingly. But the hook of drain pipe can not be installed again.
- If extra drain hose is needed, please make separate purchase. The inner diameter of the extra hose shall not less than 30mm, and the length shall not exceed 1.5m.
- If the extra hose is too long, cut it either at A or at B point.

Note: The instructions for appliances connected to the water mains by detachable hose-sets shall state that the new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

Installation and adjustment

Please install and adjust the machine according to the requirement of the manual. It is very important for your safety and for operating the machine correctly.

Install the bottom plate

- Place the washing machine on the soft laying cloth, the face is towards the upper.
- Insert the bottom cover into the slots of the bottom cover, and then lock in the fitment area.

Adjust the installation position

If the floor is uneven, adjust the adjustable feet of the washing machine to level position. Uplift the feet slightly and turn the feet to level position. The distance between the washing machine and wall: at least 20 mm. Max. tilt angle on the supporting face 2°.

Confirm the water faucet

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

It is required that the front end shall be longer than 10cm. The exit end face of the faucet shall be fat and smooth. If not please file it to avoid leakage.

Connection between the water inlet hose jointer and the water faucet

- Press the lower end of the lock lever and push down the slider. Take off the water inlet hose jointer from the water inlet hose component. See to Figure 1.
- Take off the nameplate. Make sure the threading is 4mm above the upper surface of the nut. See to Figure 6. If the threading is less than 4mm above the upper surface of the nut, please loosen the screws.
- Loosen the screw till the water faucet can be accessed. Put the jointer of the water inlet hose on the faucet. See to Figure 2. (If the faucet is too large and the jointer can not be set on the water faucet, please loosen the four screws and take out the bushing in the jointer. The front end of the faucet must be smooth, otherwise it may leak water. See to Figure 3.)
- Fasten the four screws evenly. See to Figure 4.
- Twist the fastening nut. See to Figure 5. After installation, the threading is less than 2mm above the upper surface of the nut. See to Figure 6.

Connection between the water inlet hose and the washer

- Do not take off the water absorption cushion. Please check if the cushion is dropped or damaged before each usage. If it happens please contact our after-sale department immediately.
- Put the nut of the water inlet hose on the valve jointer.
- Fasten the nut. Swing it gently to confirm if it's suitable.

Connection between the jointer of the water inlet hose and the water inlet hose

- Push down the slider. Insert the water inlet hose into the jointer.
- Hang the lock lever to the jointer. Release the slider till a click sound is heard.

Dismantle the water inlet hose

- Close the water faucet.
- Press the locking lever. Push down the slider. Then pull off the water inlet hose. If the machine is used frequently, the jointer of the water inlet hose can be kept on the faucet to prevent damaging the fixing screw.

Preparation before washing

- Connect the water inlet hose. Open the water faucet.
- Confirm that the washing machine is earthed reliably. Then insert the power plug into the receptacle. The earth terminal shall not link to gas pipeline and faucet water pipeline.
- Put down the drain hose.

WOOL WASH

- Water Temp. should be below 30 degrees to avoid possible damages on clothes.
- When the washing cycle is finished, please take out clothes and dry it to avoid rustation & deformation.
- Appropriate acid detergent is suggested where too strong & hot water is used.
- Clothes in white, black or other bright colors must be washed separately.

Pay attention to followings before washing the laundries

Check if the laundries has any special requirement for washing (fabric should be marked machine wash)	Clear the pocket. Take out the coins, keys hairpins etc.	Tie the long strips; fasten the buttons; close zippers.	The quantity of the laundries shall not be too large. Stretch and loosen the laundries before putting them in the tub.	When the pulsator is running, the buttons of the laundries may cause noise. For the sake of discretion, please wash the laundries with buttons separately (along with laundry washing bag).
---	--	---	--	---

- Check if the laundries are applicable for washing in machine.
- Divide the laundries that are not colorfast from other laundries.
- Put those laundries difficult to absorb water into water with hand.
- For those laundries with heavy soil, please first remove the dirt like mud or dust. For the parts with heavy soil, please apply detergent on them in advance, which can make it easier to remove the soil.
- For those laundries that may get lint ball and those with long fur, turn it over before putting in machine.
- Do not put the laundries polluted by chemicals into the washing machine directly.

The musts in washing

- The capacity of washing and spinning of the machine refer to the largest weight of the standard laundries under dry condition that can be washed or spinned in one time. One time washing quantity shall be lower than the rated capacity.
- The thickness, size, type of the cloth will influence the actual washing capacity. It is suitable for one time washing to put in reasonable amount of laundries and the laundries can be turned round in washing.
- Do not select the high water level for laundries less than 1.0kg, so as to avoid splashing of water.

Usage of the detergent

- It is suggested to add washing powder into the tub directly under fuzzy program and reserve program.
- Do not dissolve directly inside the washing machine. (not applicable for fuzzy and reserve program)
- Add some water (about 1" water level)
- Add washing powder. Run for about 30s to fully dissolve the powder. Then push the "Start/Pause" button.
- Put in laundries. Select suitable water level. Push the "Start/Pause" button again.
- Washing powder with poor quality or long-time storage may get caked. Please clean the detergent box daily in usage.
- Quick dissolving of washing powder: 1. Prepare warm water of 30°C and container; 2. Add washing powder slowly stirring to dissolve it completely.
- Please add suitable washing powder as per the laundries quantity, the hot water level and water quantity.
- If you select "Quick" program, it is suggested to use liquid detergent instead of washing powder to guarantee the washing effect.
- It is not recommended to use rich-foam washing powder.

How to use liquid detergents

Close the lid
If you open the lid during spin cycle the machine will stop and audible alarm will sound.

Usage of the Operation Buttons

Explanation of Buttons (Applicable for 707 Series)

Flash Normally on Wash # 41L # 46L
Rinse # 33L # 37L
Spin # 24L # 29L
Tub Dry # 12L # 18L

Normal # 3
Soak # 4
Delicate # 5
Quick # 6

Water Level # 1
Delay # 2
Program # 3

Explanation of Buttons (Applicable for 678 Series)

Normal # 3
Soak # 4
Delicate # 5
Quick # 6

Water Level # 1
Delay # 2
Program # 3

Explanation of Buttons (Applicable for 698 & 528 Series)

Wash Water Level: 1-2, 3-4, 5-6, 7-8, 9-10
Wash Time: 1-2, 3-4, 5-6, 7-8, 9-10
Rinse Time: 1-2, 3-4, 5-6, 7-8, 9-10
Spin Time: 1-2, 3-4, 5-6, 7-8, 9-10

Start/Pause, Power, Child Lock

Explanation of Buttons (Applicable for 789 & 826 Series)

Wash Water Level: 1-2, 3-4, 5-6, 7-8, 9-10
Wash Time: 1-2, 3-4, 5-6, 7-8, 9-10
Rinse Time: 1-2, 3-4, 5-6, 7-8, 9-10
Spin Time: 1-2, 3-4, 5-6, 7-8, 9-10

Start/Pause, Power, Child Lock

Explanation of Buttons (Applicable for 707E, 1269DB & AE/FE)

Wash Normally on Wash # 41L # 46L
Rinse # 33L # 37L
Spin # 24L # 29L
Tub Dry # 12L # 18L

Normal # 3
Soak # 4
Delicate # 5
Quick # 6

Water Level # 1
Delay # 2
Program # 3

Start/Pause, Power, Child Lock

Indicator mode and meaning

Off
Flashing: indicate the running program, or indicate the selected mode or indicate the water level
On: indicate the program about to run, or indicate the selected mode or indicate the water level

Digital tube

- It displays total remained time during the running program (min) it displays the remained reserve time during delay
- It displays abnormal symbol in abnormal situation.
- It displays "-" during detecting the actual washing time might be different with display time under the condition of different water pressure, different cloth material and different loading cloth.

Child lock function

- The function is intended for children safety and preventing the washing program from accidental changes by children
- (Applicable for 707, 707E, 1269DB, AE & FE Series)
Set the desired washing program, after setting, press the Start/Pause button, and washing machine begin to run. Then hold the water level button and delay/program button at the same time for more than 3 seconds, you will hear three beep sound, digital tube display "CL" and the child lock will activate. The circular indicator light under right corner of the digital tube will flash. All of the buttons are locked and have no function.
- (Applicable for 789 & 826 Series)
Press the Start/Pause button, and washing machine begin to run. Then hold the Process and DIY button at the same time for 3 seconds, you will hear 3 beep sound and Child lock will activate and "CL" will display.

- Release the child function: Press the water level button and delay button at the same time for more than 3 seconds. After three beep sound, the child lock function is released, or the machine will set to child lock function automatically for using every time.

Note: If you open the lid when the child lock activates, digital tube displays "E2", beeps and stops running. If the safety can be sure and you need to go on with running, you need close the lid, press the water level button and delay button at the same time for more than 3 seconds to released the child lock function and then continue running, or the washing machine will drain after 10 seconds, and power will be off after 10 minutes.

(Applicable for 698 & 528 Series)

Child Lock
The function is intended for children safety and preventing the washing program from accidental changes by children.

(Applicable for 678 Series)

- Set the desired washing program after setting, press the Star/Pause Button, and washing machine begin to run. Then hold progress Button and Delay Button at the same time for more than 3 seconds, you will hear three beep sound, digital tube display "CL", and the key lock will activate. All of the buttons are locked, and will not function.
- Release the Key Lock function: Press the program Button and delay at the same time for more than 3 seconds, after three beep sound, the Key Lock Function is released.

Note: If you open the lid when the Key Lock activate, digital tube display "E2", and beeps, you need close the lid and press the Start/Pause to cancel, or washing machine will drain after 10 seconds, and power off after 10 minutes.

Additional Program features for 678 Series

- Tub Dry**
Push the "Tub Dry" button to select the tub dry procedure. The purpose is dry the outer tub and the inner tube, which can avoid growing mildew on the outer and the inner tube.
- Air Dry**
Push the "Air Dry" button to select the air dry procedure. The purpose is dry the laundries. The max drying capacity of the fibre laundries is 2.5kg. "Air Dry" Program cannot be reserved.
- Reserve Water**
Push the "Reserve water" button to select reserve procedure. It will not drain off water unless press the "start/pause", the water will drain in container that more lower. It will reserve 4 hours if the procedure involved function of "Rinse" and alarm every 15 minutes. Like the button of "wool" "Drum Clean" "Anti Blanket" "Spin", it has no the function.
- Door Lock Feature**
In case of sudden power cut, top lid will not open and need to wait till power resumes.

Spin Program Selection Method for 70-789 Series

- Push the "power" button and then "Process" button.
- Change water level (0-10 level): Push "DIY" to change level.
- Change wash time (0-25 min). Push the process button till light blink on wash time. Push "DIY" to change time.
- Set wash time 0 to eliminate washing operation.
- Change rinse time (0-3 min): Push the process button till light blink on rinse time. Push "DIY" to change time.
- Set Rinse time 0 to eliminate rinsing operation.
- Change Spin time (0-9 min): Push the process button till light blink on spin time. Push "DIY" to change time.
- If user want to spin only, Push "DIY" to set wash time & rinse time into Zero.
- Push "Start" Button to run machine.