

**Haier**  
Inspired Living

 
User Manual

**MODELS:**

LE50S8HQGA

LE55S8HQGA

LE65S8HQGA

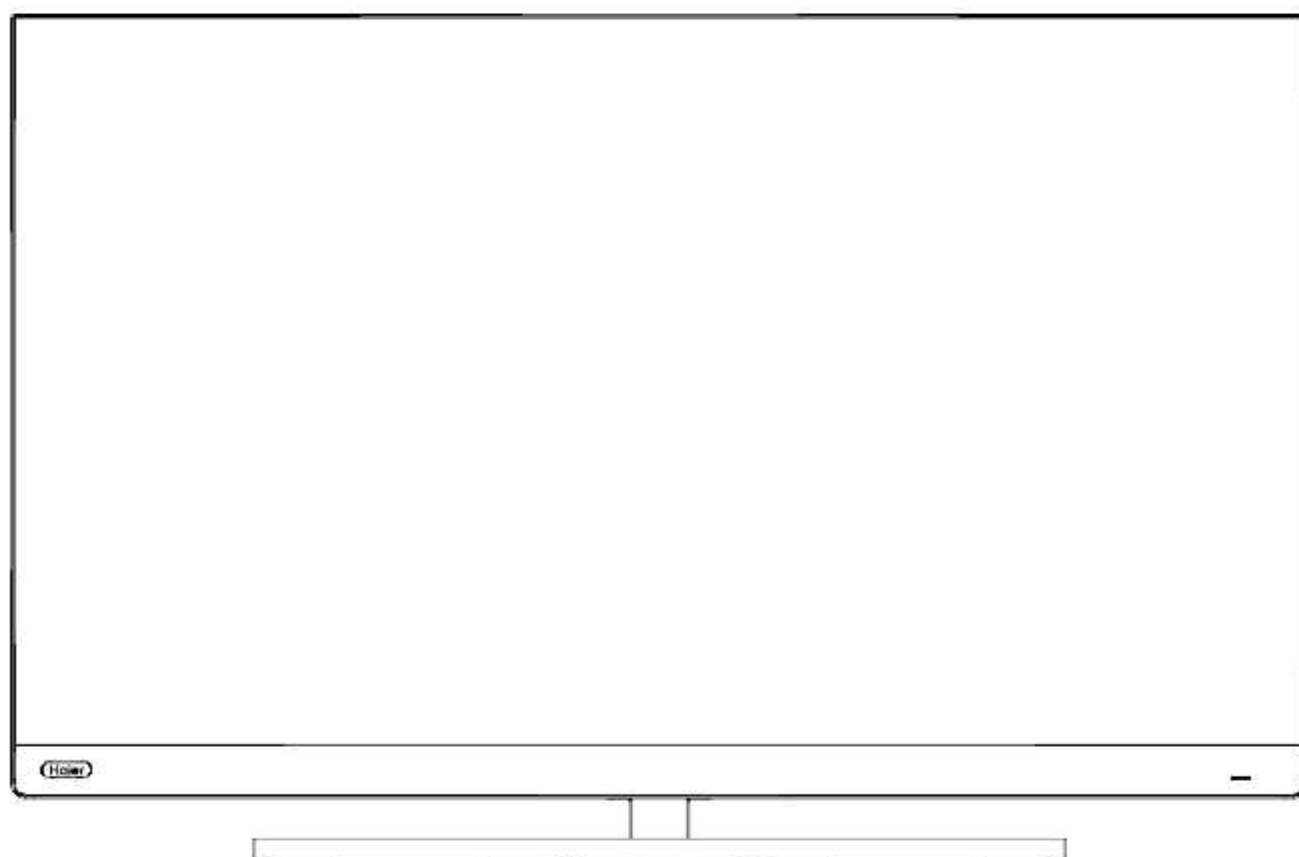

LED Television

# TABLE OF CONTENTS


|   |    |
|---|----|
| 1. IMPORTANT SAFETY INSTRUCTIONS .....      | 1  |
| 2. PRECAUTIONS AND REMINDERS.....           | 2  |
| 3. PREPARATION .....                        | 3  |
| 4. PERIPHERAL CONNECTION AND CONTROLS ..... | 4  |
| 5. MAKING CONNECTIONS.....                  | 5  |
| 6. OPERATING INSTRUCTIONS .....             | 6  |
| 7. TV OPEARTION .....                       | 17 |
| 8. TROUBLESHOOTING .....                    | 18 |
| 9. PRODUCT SPECIFICATION .....              | 19 |


## IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings, install in accordance with the instructions.
- 8) Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protected the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 15) The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
- 16) No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 17) Attention should be drawn to the environmental aspects of battery disposal.
- 18) The use of apparatus in moderate climate.
- 19) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

**\*Actual product may vary in appearance from above image\***



 The symbol indicates that dangerous voltages constituting a risk of electric shock are present within this unit.

 The symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

### WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

### WARNING:

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

 


This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## PRECAUTIONS AND REMINDERS



High voltages are used in the operation of this television receiver. Do not remove the cabinet back from your set. Refer servicing to qualified service personnel.

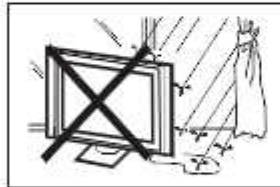

To prevent fire or electrical shock hazard, do not expose the television receiver to rain or moisture.



Do not drop or push objects into the television cabinet slots or openings. Never spill any kind of liquid on the television receiver.



Do not block the ventilation holes in the back cover. Adequate ventilation is essential to prevent failure of electrical components.



 
Do not trap the power supply cord under the television receiver.



If you are going to clean the product, Unplug the TV, use soft fabric, no water, never chemicals.



Never stand on, lean on, or suddenly push the television or its stand. You should pay special attention to children. Serious injury may result if it falls.

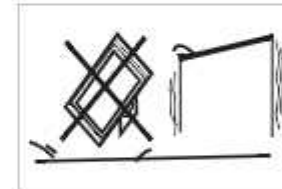


Do not place your television on an unstable cart, stand, shelf or table. Serious injury to an individual, and damage to the television, may result if it falls.



When the television receiver is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.



 Avoid exposing the television receiver to direct sunlight and other sources of heat. Do not stand the television receiver directly on other products which give off heat, e.g. video cassette players and audio amplifiers. Do not place naked flame sources, such as lighted candles on the television.

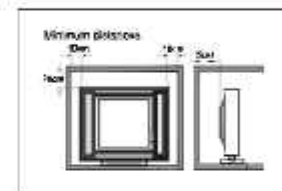

If the television is to be built into a compartment or similar enclosure, the minimum distances must be maintained. Heat build-up can reduce the service life of your television, and can also be dangerous.

Note: the use of apparatus in moderate climates.

Note: This product uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.


## PREPARATION

 **IMPORTANT:** Do not apply pressure to the screen display area which may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.

### ATTACHING THE STAND

**IMPORTANT:** The stand of the TV must be assembled prior to usage.

1. Place TV unit face down on a soft and flat surface (blanket, foam, cloth, etc.) to prevent any damage to the TV.
2. Fix the stand to the bottom of the TV with the six screws. And 6 pcs screws to stand.

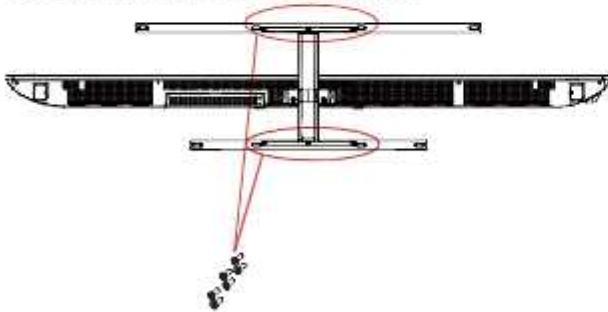

**NOTE**  
The appearance of the product shall be in kind.

### PREPARING YOUR LED TV FOR WALL MOUNTING

We suggest that you keep your TV at least 2.36 inches (60 mm) from the wall to prevent cable interference. Before mounting your TV on the wall, you need to remove the stand.

For your safety, please use only with a UL listed wall mount bracket with minimum weight of the TV without stand.

To attach a wall mount bracket to your TV:

 
1. Remove the screws holding your TV to the stand.
2. Remove the stand from your TV.
3. Secure the wall mount bracket to the back of your TV using four screws. Follow the instructions of the user manual that came with the wall mount bracket to install.



**NOTE**  
The wall mount bracket are not included.


### TURNING ON THE TV

1. Install the stand and place the TV on a solid surface.

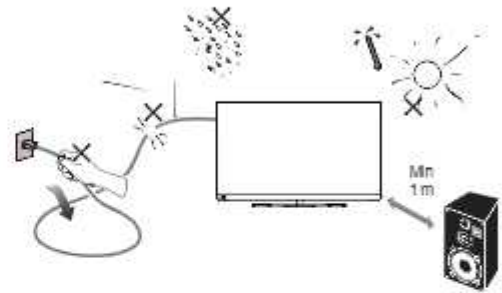



#### NOTE

 - Ensure that the TV is placed in a position to allow free flow of air. Do not cover the ventilation openings on the back cover.
  - To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity.
  - Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing.
2. Connect the antenna cable or cable TV cable to the **ANT IN** aerial socket on the back of the TV set.
  3. Remote control:  
Remove the cover of the battery compartment. Insert 2 batteries (Type AAA 1.5V).

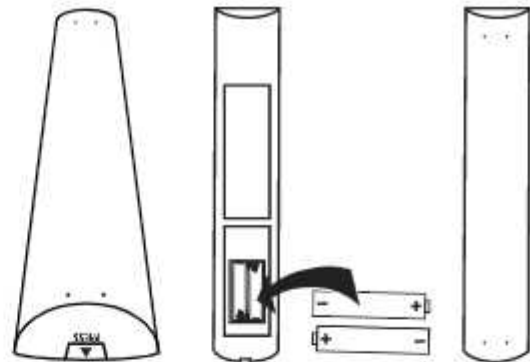

 
4. Power:  
Plug the cord into a working power outlet.

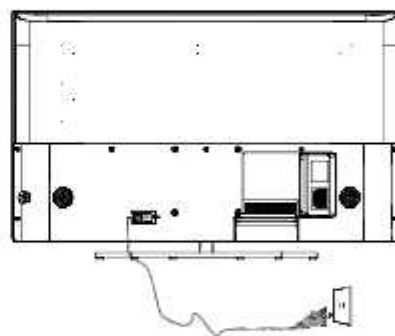

5. Turn the TV on:  
Press  on the remote control or **POWER** button on the side control panel of the TV.

# PERIPHERAL CONNECTION AND CONTROLS
 
## BUTTON CONTROL

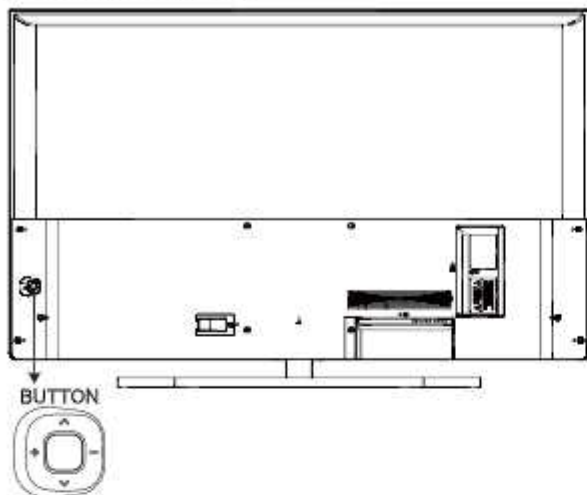

### Middle key

In the standby mode, press the middle button to turn on the TV.  
In the boot state, long press the middle button to shut down.  
Under the menu page, function equivalent to the OK key.

### Left and right keys

In the non-menu page, press the left and right keys to adjust the volume addition and subtraction.

### Up and down keys

In the non-menu page, you can adjust the TV channel under the program addition and subtraction;  
Under the menu page, you can move the cursor up and down.

## ACCESSORIES

Remote Control - 1pc  
AAA Battery - 2pcs  
User's Manual - 1pc  
Screws - 4pcs  
Mini YPbPr Cable - 1 pc

## PERIPHERAL CONNECTION



 
All the terminals are(from left to right):  
OPTICAL, USB1, RJ45, HDMI1, HDMI2, HDMI3, VIDEO, L, R



All the terminals are(from left to right):  
HDMI4(ARC), LNB IN(SATELLITE), ANT IN(ANTENNA/CABLE), CI, MINI YPbPr,  
EARPHONE, TF, USB2.

# MAKING CONNECTIONS

You can use the input terminals on TV set rear as follows.

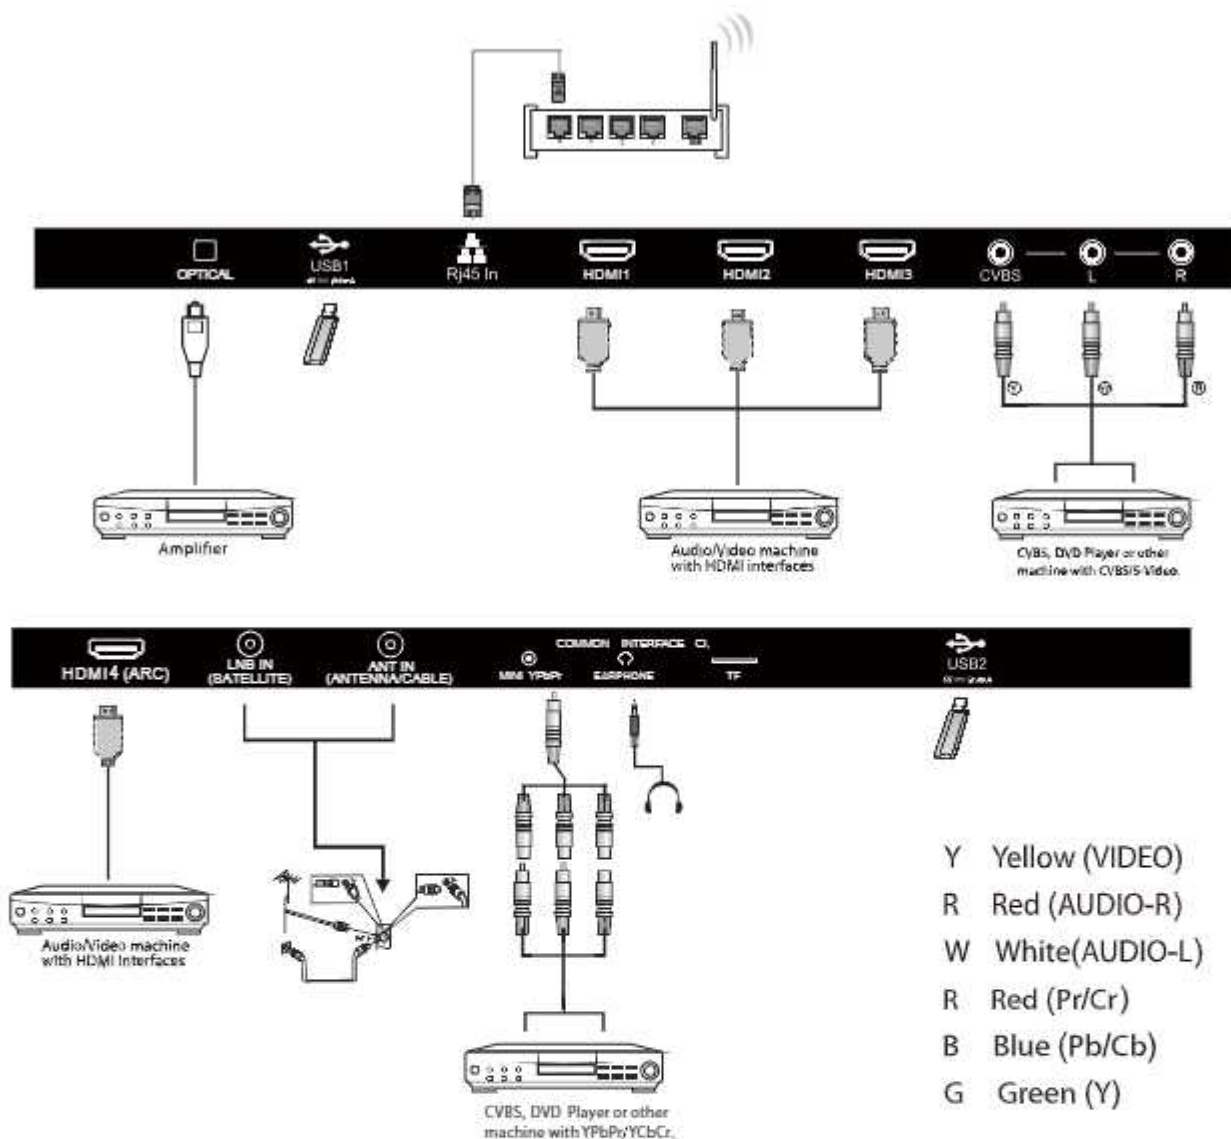

1. RF: Antenna/close circuit TV
  2. YPbPr: Component input terminal.
  3. HEADPHONE: Headphone output.
  4. USB: Connect USB device.
  5. HDMI: Connect to High-definition multimedia signal resource.
  6. AV INPUT: Video input/Audio input.
- Note: Video And YPbPr share one audio channel.

# OPERATING INSTRUCTIONS

## USING THE REMOTE CONTROL



| #  | Item                    | Descriptions  |
|----|-------------------------|---|
| 1  | <b>Power</b>            | Press to turn the TV on or off. When your TV is off, power still flows through it. To completely disconnect power, unplug the power cord. |
| 2  | <b>MUTE</b>             | Press to switch the sound on or off.  |
| 3  | <b>Google Assistant</b> | Press to open the google assistant or start a voice search.   |
| 4  | <b>◀◀(reverse)</b>      | Press to reverse playback in multimedia & Timeshift mode.   |
| 5  | <b>▶(play)</b>          | Press to play in multimedia mode & Timeshift mode.  |
| 6  | <b>▶▶(forward)</b>      | Press to fast forward in multimedia & Timeshift mode.   |
| 7  | <b>(REC)</b>            | Press to record the TV program you are watching in DTV mode.  |
| 8  | <b>   (Pause)</b>       | Press to pause in multimedia mode & Timeshift mode.   |
| 9  | <b>■ (stop)</b>         | Press to stop multimedia playback, REC & Timeshift mode.  |
| 10 | <b>TEXT</b>             | Press to select the teletext mode.  |
| 11 | <b>FAV</b>              | Press to select or remove your favorite channel.  |
| 12 | <b>SUBTITLE</b>         | Open or close subtitle.   |
| 13 | <b>SOURCE</b>           | Press to open the input source list.  |
| 14 | <b>NETFLIX</b>          | Press to open the NETFLIX.  |
| 15 | <b>YouTube</b>          | Press to open the YouTube.  |
| 16 | <b>HOME</b>             | Press to open the Home Page.  |
| 17 | <b>MENU</b>             | Press to open or close the on-screen menu.  |
| 18 | <b>▲▼◀▶</b>             | Press to navigate the on-screen menu.   |
| 19 | <b>OK</b>               | Enter the selected option or perform the selected operation.  |
| 20 | <b>BACK</b>             | Return to the previous menu.  |
| 21 | <b>EXIT</b>             | It depends on the actual function.  |
| 22 | <b>INFO</b>             | Press to display the channel information.   |
| 23 | <b>GUIDE</b>            | Press to display electronic programme guide in TV mode.   |
| 24 | <b>VOL+/VOL-</b>        | Press <b>VOL+</b> or <b>VOL-</b> to adjust volume level.  |
| 25 | <b>CH+/CH-</b>          | Press <b>CH+</b> or <b>CH-</b> to change TV channels.   |
| 26 | <b>0~9 number</b>       | Press to enter a TV channel number.   |
| 27 | <b>CH.LIST</b>          | Press to display the Channel List.  |
| 28 | <b>AUDIO</b>            | Press to select Mono, Nicam, Stereo for ATV channel, Audio language for DTV channel.  |
| 29 | <b>Coloured buttons</b> | Implement the relevant operations according to the prompt at the bottom of the menu in the text.  |



# OPERATING INSTRUCTIONS

## INITIAL SETUP

The first time you turn on your TV, the setup wizard will guide you through setting up basic settings. Please according to the Text Tip to First Time Setup.



This function is used for the remote control pair code. After the code is successful, you can use the Bluetooth remote control to operate the TV.



 
Press ▲/▼ to select the system language and press OK to confirm the language.



Connect your Android phone to your TV, select "Continue" to continue the connection, and choose "Skip" to skip this step.




Press ▲/▼ to select the wifi to connect, press OK and enter the password to confirm the connection is successful.

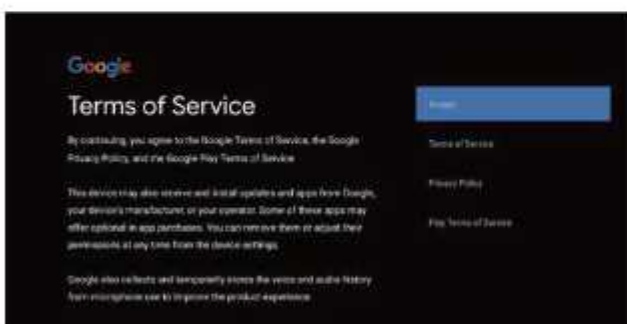

By accepting the Google Terms of Service to improve the product experience, select "Accept" to accept this condition.



 Agree to Google to get the location information of your device to get more features, choose "YES" to accept.

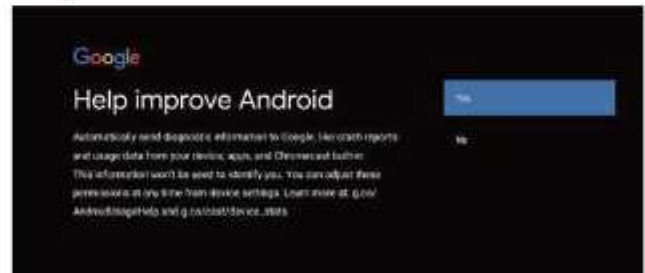


By agreeing to automatically send diagnostic information to Google to improve discriminative power, choose "YES" to accept.



1. Your device is powered by Android TV and press the ► button to select the browsing feature.
2. You can get more apps from Google Play and press the ► button to go to the next screen.
3. Transfer photos and other content to the TV via the built-in chromecast, press OK to complete the browsing.



 Press ▲/▼ to select the country of your device and press OK to confirm.

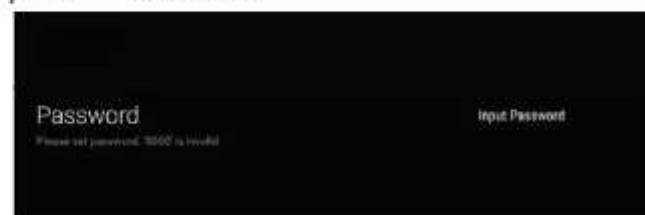

Used to set your device's password to ensure security and privacy.


# OPERATING INSTRUCTIONS



 
Press **OK** to pop up the soft keyboard, and use the remote control to enter the 4-digit password automatically jump to the next interface.




Confirm the password again and keep it consistent. Use the remote control to enter the password and complete the password confirmation.

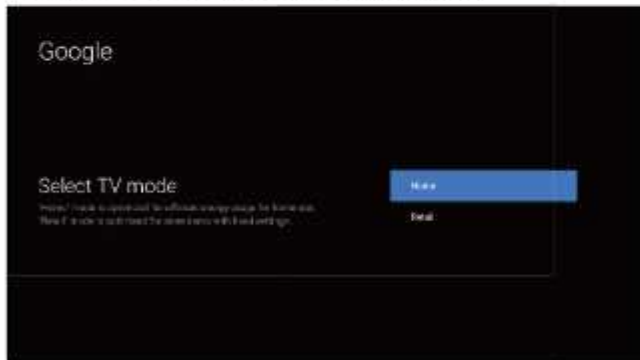

 For selecting the mode, press **▲/▼** key to select Home mode and press **OK** to confirm.

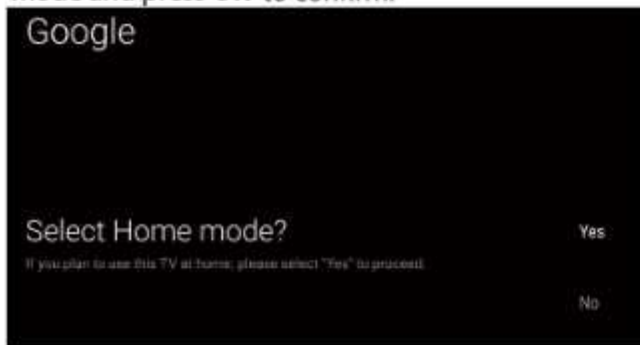

 Confirm the selected mode again, select "Yes" to confirm the selected mode, and select "No" to return to the previous step.



Press **▲/▼** to turn on or off the always available features of Chromecast.



 
Press **▲/▼** to select whether to search for satellite channel.



To select the Tuner mode for searching, press **▲/▼** to select and press **OK** to confirm.



Press **▲/▼** to select whether to search, select "Scan" to search, select "Skip scan" to skip the search.

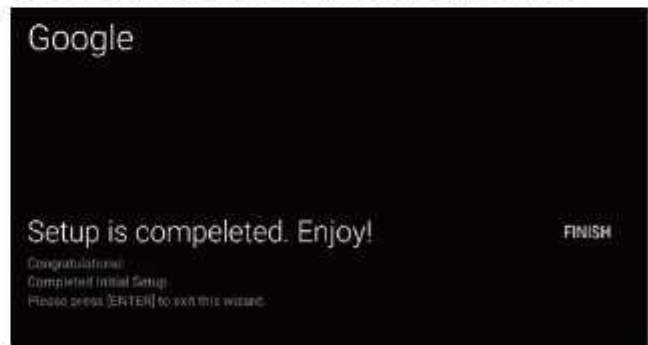


Press **OK** to complete the setup.

## NOTE

 The IOT system is working support towards a more connected IOT based home appliances, The simplicity of voice control will allow the smart television to act as the central access point of the modern smart home under the standard language & words.

## HOME SCREEN

After completing the wizard Settings, you can watch TV and go to the home screen.

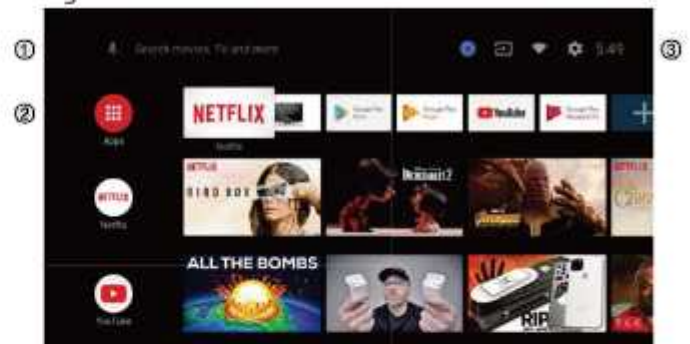


- ① Open the google assistant or start a voice search.
- ② Among the applications installed on the TV, the icons for the favourite applications are shown inside here. (Favourite applications can be added / deleted / changed its order by users.)
  - 📱 **Apps:** Click to jump to Apps screen where all the installed applications are listed.
- ③
- ④ **Notification:** Display the notifications.
  - 📺 **Inputs:** Icon to select an input source.
  - 🌐 **Network&Interent:** Icon to Set up Network, Such as wifi.
  - ⚙️ **Settings:** Various settings can be configured here. For details on the settings, see the next explanation.

# OPERATING INSTRUCTIONS
 
## INPUT SOURCE

1. In the HOME interface, press ▲/▼ ◀/▶ to select the "Inputs" icon, press **OK** to open the input source list, then press up to highlight an input and press **OK** to switch.

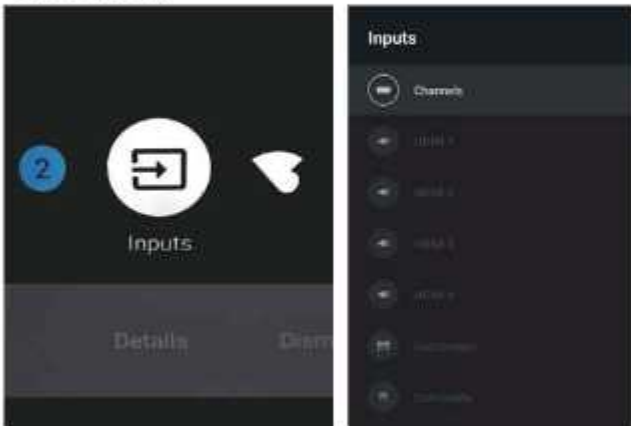

2. Under live TV, press the **SOURCE** button to display the list of input sources. You can select the desired source.




## NAVIGATING THE ON-SCREEN MENU

 1. There are two ways to enter. First, in live TV, press the menu button to display TV options, press ▲/▼ ◀/▶ to select the settings menu and press **OK** to confirm. Second, in the HOME interface, press the ▶ key to select the icon of the circular settings menu, press **OK** to confirm.




2. Press ▲/▼ button to select what you want set.
3. Press **OK** to enter setting.

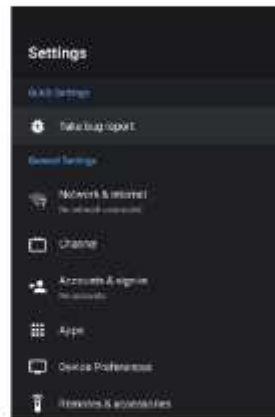

Press **BACK** to return to the previous menu. If the main menu is displayed, pressing **BACK** will close the onscreen menu.

## Network

 1. Press ▲ /▼ button to select what you want set .
2. Press **OK** button to adjust.
3. After finishing your adjustment, Press **OK** button to save and return to the previous menu.

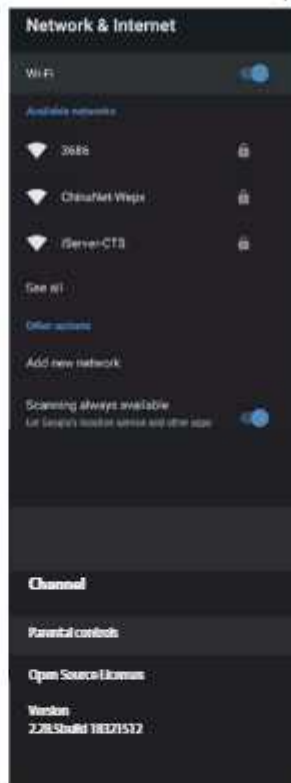

# OPERATING INSTRUCTIONS

**Channels** – Display the scan sub-menu based on different Channel installation modes.

**Channel installation mode** – Select on-screen display channel sources. You can select the signal type.

- **Antenna** – Set the signal type to antenna. When set to Antenna, the TV can receive analog and digital (DVBT/T2) broadcasting signals.
- **Cable** – Set the signal type to cable. When set to Cable, the TV can receive analog and QAM broadcasting signals.
- **Satellite** – Set the signal type to Satellite. When set to Satellite, the TV can receive Satellite broadcasting signals.

 
**Auto Channel Update** – Press **OK** button to choose ON/OFF. When selecting ON, the system will automatically scan and update channels after 5 minutes of standby.

**Parental controls** – Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

**Audio Channel** – Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

**Open source licenses** – Press **▲/▼** button to select the option then press **OK** button to enter the sub-menu.

## Antenna

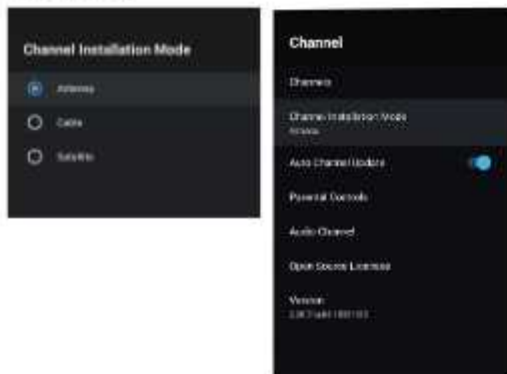

1. Menu->Settings->Channel->Channel Installation Mode enter, choose Antenna.



2. Enter Menu->Settings->Channel->Channels.



3. Channel Scan directly enters the ATV+DTV automatic search platform interface of Antenna.

**Update Scan:** Re-automatically search for frequency points outside the station.



**Analog Manual Scan:** Manual ATV search station. After input the frequency point, you can select up or down search station.



**Single RF Scan:** DTV manual search, left and right after selecting RF Channel, directly OK search.

## Cable



1. Menu->Settings->Channel->Channel Installation Mode, select Cable.

2. Enter Menu->Settings->Channel->Channels.



# OPERATING INSTRUCTIONS

3. Enter Channel Scan, where Akado,DivanTV,Online and Rostelecom(SPB) the local operator,and the default Scan Mode is Advance; Others have Advance,Quick and Full Scan modes.



**Single RF Scan:** manual search station.

 
## Satellite



1. Menu->Settings->Channel->Channel Installation Mode, select Satellite.



2. Enter Menu->Settings-> channel-> Channels->Satellite Re-scan.

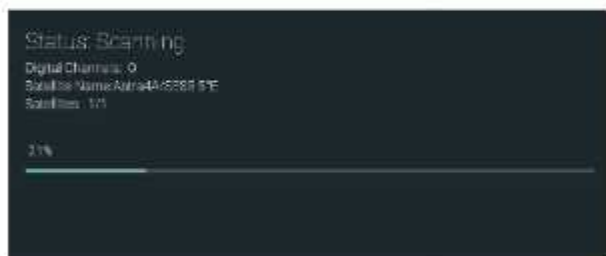

**Satellite Re-scan** Satellite automatically searches for relevant Settings.

 
1. Press OK to select 'Next' to enter the default satellite channel search.



2. Select different types of satellite stars and satellite types.



**Satellite Add:** Add a star broadcast signal.

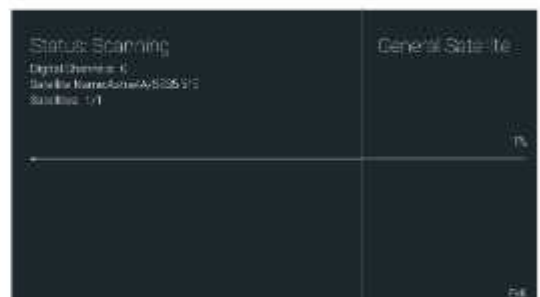

**Satellite Manual Tuning** Manually search for a certain TP, which can be added by Satellite Re-scan if needed.

# OPERATING INSTRUCTIONS

## ACCOUNTS & SIGN IN



## APPS



In this menu, you can set the APP permissions, and read the app lists

1. Press ▲/▼ button to select what you want set .
2. Press OK button to adjust.
3. After finishing your adjustment, press **BACK** button to return to the previous menu.

## DEVICE PREFERENCES

### ABOUT



In this menu, you can read the information and settings of TV.

1. Press ▲/▼ button to select what you want set .
2. Press OK button to adjust.
3. After finishing your adjustment, Press **BACK** button to return to the previous menu.

### DATE&TIME



**Automatic date & time** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Use network-provided time, Off)

#### NOTE

- Manually adjusting date & time settings will automatically change the **Automatic date & time** to **OFF** .


**Set date** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

**Set time** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

**Set time zone** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

**Use 24-hour format** – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.
 
## TIME

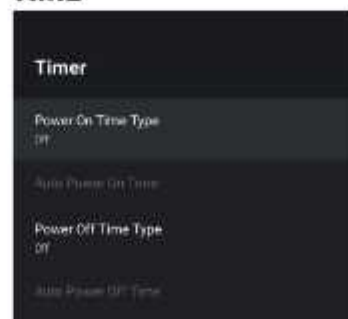

**Power On Time Type** – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF/ONCE.

**Power On Time** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

**Power Off Time Type** – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF/ONCE.

**Power Off Time** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

## LANGUAGE



**Language** – Press ▲/▼ button to select the option then press **OK** button to enter the select language.

## KEYBOARD



**Current keyboard** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**Gboard Settings** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**Manage keyboards** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

## INPUTS



**Inputs** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**HDMI control** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

**Device auto power off** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

**TV auto power on** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

**HDMI EDID Version** – show EDID version.

**CEC Device List** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

## POWER



**Sleep Timer** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: off, 10 minutes, 20 minutes, 30 minutes, 40 minutes, 50 minutes, 60 minutes, 90 minutes, 120 minutes ).

**Picture off** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

**Switch off timer** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: off, 30 minutes, 60 minutes, 90 minutes, 120 minutes, 150 minutes, 180 minutes, 210 minutes, 240 minutes )

**No Signal Auto Power Off** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: off, 5 minutes, 10 minutes, 15 minutes, 30 minutes, 60 minutes ).

## PICTURE



**Picture Mode** – Press ▲/▼ button to select the option button to enter the sub-menu. (Optional: user, Standard, Vivid, Sport, Movie, Game, Energy saving).

**Backlight/Brightness/Contrast/Saturation/HUE/Sharpness** – Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

**Gamma** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: Dark, middle, Bright).

**Color Temperature** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**HDR** – Press ▲/▼ button to select the option the press OK button to enter the sub-menu. (Optional: on, off).

**Advanced Video** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**Reset to Default** – Reset all settings to the factory defaults.

# OPERATING INSTRUCTIONS

## SOUND



**Sound style** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: user, Standard, Vivid, Sports, Movie, Music, News).

**Balance/Bass/Treble** – Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

**Sound Surround** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

**Equalizer Detail** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

**Speakers** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: TV Speaker, External Audio System).

**Digital Output** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: Auto, Bypass, PCM, Dolby Digital Plus, Dolby Digital).

**SPDIF Delay** – Press ▲/▼ button to select the option. Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

**Auto Volume Control** – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

**Downmix Mode** – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: Stereo, Surround).

**Reset to Default** – Reset all settings to the factory defaults.

## STORAGE



**Internal shared storage** – Press ▲/▼ button to select the option then press button to enter the sub-menu.

**Removable Storage** – Press ▲/▼ button to select the option then press button to enter the sub-menu. ( Note: Show external devices if available)

## HOME SCREEN



In this menu, you can set channels, apps, open source licenses.

1. Press ▲/▼ button to select what you want set.
2. Press button to adjust.
3. After finishing your adjustment, Press BACK button return to the previous menu.

## RETAIL MODE



**Retail mode** – Press ▲/▼ button to select the option then press button to choose ON/OFF.

**Retail messaging** – Press ▲/▼ button to select the option then press button to enter the sub-menu. ( Note: Demo video, e-POP left, e-POP bottom)

**PQ Demo** – Press ▲/▼ button to select the option then press button to enter the sub-menu. ( Note: OFF, LEFT, RIGHT)



# OPERATING INSTRUCTIONS

## GOOGLE



In this menu, you can set searchable apps, safe search filter, block offensive words, open source licenses.

1. Press ▲/▼ button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, press **BACK** button to return to the previous menu.

 
## CHROMECAST BUILT-IN



In this menu, you can read the information and settings of Chromecast

1. Press ▲/▼ button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, press **BACK** button to return to the previous menu.

## SCREEN SAVER

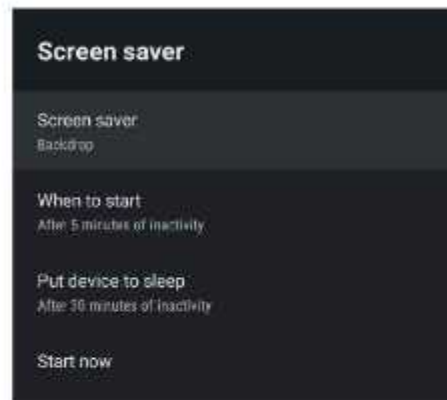

**Screen saver** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.


(Optional: Turn screen off, Backdrop, Colors)

**When to Start** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: 5 minutes, 15 minutes, 30 minutes, 1 hour, 2 hours,).

**Put device to sleep** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: 30 minutes, 1 hour, 3 hours, 6 hours, 12 hours, Never).


**Start now** – Press ▲/▼ button to select the option then press **OK** button to enter screen saver.

## LOCATION

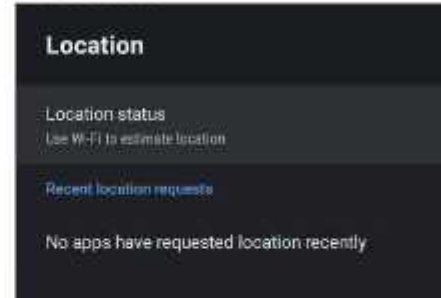 


**Location status** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: Use Wi-Fi to estimate location, Off)

## USAGE & DIAGNOSTICS

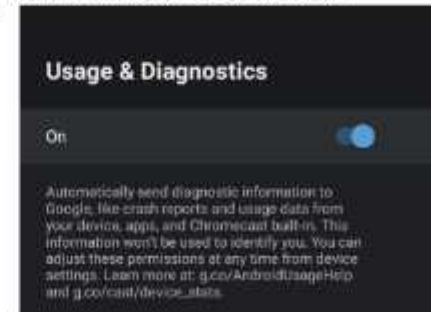 

**Usage & diagnostics** – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

## ACCESSIBILITY

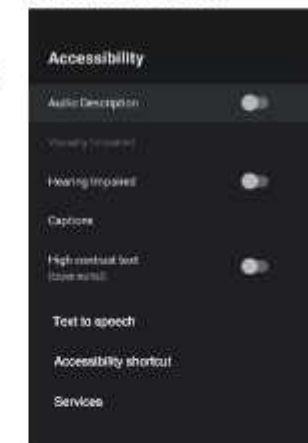 

**Audio Description** – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

**Visually Impaired** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Need: **Audio Description ON**)

**Hearing Impaired** – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

**Captions** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu

**High contrast text** – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

**Text to speech** – Press / button to select the option then press **OK** button to enter the sub-menu.



# OPERATING INSTRUCTIONS

  **Accessibility shortcut** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

## RESET

Press **OK** button to enter the sub-menu.  
Reset-Erase everything.

## REMOTE&ACCESSORIES

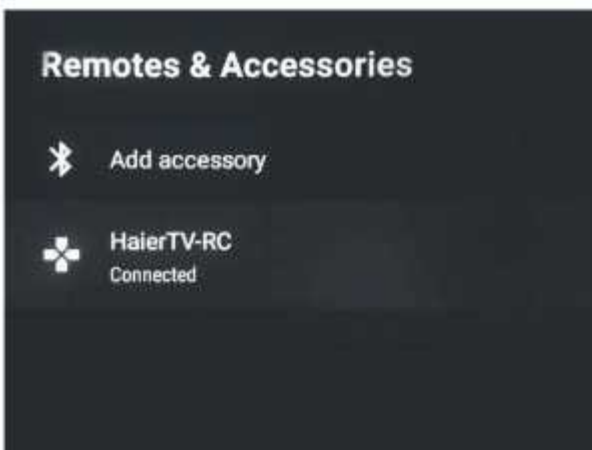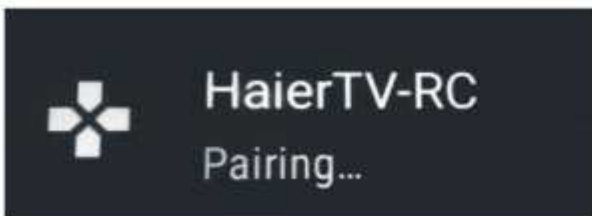


In this menu, you can pair Bluetooth devices.

1. Press the " " and " " buttons at the bottom of the remote control for 5 seconds.
2. When the LED starts to flash, release it. The remote controller will send the pairing signal to the TV and display the information of the remote control on the right side of the screen.
3. Press the " " button to display the pairing. If the paired is displayed, the connection is successful.
4. If the couldn't pair appears, the connection fails. Wait 30 seconds and then press the " " and " " buttons at the bottom of the remote control for 5 seconds to repeat the previous steps.
5. Press **BACK** button return to the previous menu.

## ADD AND USE OF MULTI MEDIA PLAYER



 1. In the HOME interface, select the + icon in the APP column to add the application, and click OK. Press up and down to select the MultiMediaPlayer application, and click OK to add it to the HOME interface.

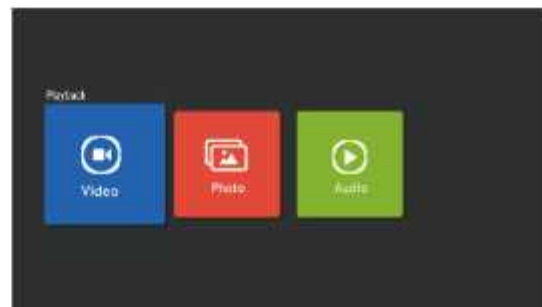

2. Select OK key to enter Multi Media Player and display Video, Photo, Audio. After inserting the usb flash drive, you can view the corresponding files in the usb flash drive.

### NOTE

The menu may be different depending on when you purchased the TV.

### Read Before Using Apps:

(\*Terms & Conditions apply)

- Due to the product characteristics featured on the Apps store, as well as limitations in available content, certain featured applications, and services may not be available on all devices or in all territories. Some Apps featured may also require additional peripheral device or membership fees. Services and content availability are subject to change without prior notice.
- Manufacture takes no legal responsibility whatsoever for any interruption of App services caused by the service provider for any reason.
- An unstable Internet connection may cause delays or interruptions. In addition, applications may terminate automatically depending on the network environment.
- Applications services and updates may become unavailable.
- Application content is subject to change by the services provider without prior notice.
- Specific services may differ with the version of the application installed on the TV.
- An application's functionality may change in future version of the application.
- Depending on the third party service provider's policies, certain applications may not support multitasking.
- The response to remote commands and the resulting on-screen display may be delayed while a webpage is loading.
- The copy and paste operations are not supported.
- The web browsing speed will differs with the network environment.
- Depending on the types of video/audio codecs supported, it might not be possible to play certain video and audio files while playing content.
- Apps store have certain limitation, it consist many inbuilt apps for various needs of user but user doesn't have facility to add other apps from any other media.

## TROUBLESHOOTING

Please make these simple checks before calling service. These tips may save you time and money since charges for receiver installation and adjustments of customer controls are not covered under your warranty.

| Symptoms   | Items to Check and Actions to Follow  |
|--|---|
| "Ghost" or double image                          | <ul style="list-style-type: none"> <li>This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.</li> </ul>   |
| No power   | <ul style="list-style-type: none"> <li>Check if the TV's AC power cord is plugged into the outlet.</li> <li>Unplug the TV, wait for 60 seconds. Then reinsert plug into the outlet and turn on the TV again.</li> </ul>   |
| No picture                                       | <ul style="list-style-type: none"> <li>Check antenna connections at the rear of the TV to see if it is properly connected to the TV.</li> <li>Possible broadcast station trouble. Try another channel.</li> <li>Adjust the contrast and brightness settings.</li> <li>Check the Closed Captions control. Some TEXT modes could block the screen.</li> </ul> |
| Good picture but no sound                        | <ul style="list-style-type: none"> <li>Increase the volume level by pressing the <b>VOL+</b> button on the remote control or on the TV side control panel.</li> <li>Press the <b>MUTE</b> button on the remote control to ensure mute is off.</li> </ul>  |
| Good sound but poor color                        | <ul style="list-style-type: none"> <li>Adjust the contrast, color and brightness settings.</li> </ul>   |
| Poor picture                                     | <ul style="list-style-type: none"> <li>Poor picture quality may occur when an activated S-VHS camera or camcorder is connected to your TV and other peripherals at the same time. Switch off one of the peripherals.</li> </ul>   |
| Snowy picture and noise                          | <ul style="list-style-type: none"> <li>Check the antenna connection.</li> </ul>   |
| Horizontal dotted line                           | <ul style="list-style-type: none"> <li>This may be caused by electrical interference (e.g. hair dryer, nearby neon lights, etc.) Turn off the equipment.</li> </ul>   |
| Television not responding to remote control      | <ul style="list-style-type: none"> <li>Check whether the batteries are working. Replace if necessary.</li> <li>Clean the remote control sensor lens on the TV.</li> <li>You can still use the buttons on the side of your TV.</li> </ul>  |
| Pixels (dots) that are always dark or always lit | <ul style="list-style-type: none"> <li>Your TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. These types of occurrences are inherent to this type of product and do not constitute a defective product.</li> </ul>  |

## PRODUCT SPECIFICATION

### 126CM UHD Digital LED TV

|                                    |  |
|------------------------------------|--|
| <b>Television picture quality:</b> | UHD<br>Integrated digital.<br>Screen Size: 126cm<br>Resolution 3840x2160 pixels 60Hz.  |
| <b>TV System:</b>                  | PAL-B/G,SECAM-B/G  |
| <b>Power consumption:</b>          | 140W   |
| <b>DTV Tuner Decoder</b>           | DVB-T, DVB-C, DVB-T2, DVB-S2<br>16/32/64/128/256 QAM modulation<br>MPEG2,MPEG4,H.265   |
| <b>Connectivity:</b>               | 1 Optical port<br>2 USB ports<br>1 RJ45<br>4 HDMI sockets<br>1 VIDEO socket<br>1 L socket<br>1 R socket<br>2 RF sockets<br>1 YPbPr socket<br>1 EARPHONE port<br>1 TF socket<br>1 CI slot<br>Supported Systems:PAL+SECAM<br>Storage channel number: 1000(DTV),100(ATV)<br>TV (RF) :75 Ω Imbalance<br>AV Video-Input:75 Ω ,1V-P,RCA<br>AV Audio-Input:20K Ω ,500mV RMS<br>YPbPr/HDMI Video Input:480i, 576i, 1080i, 4K(HDMI) |
| <b>Sound quality:</b>              | Stereo sound system.<br>2 x 12 watts RMS power output.   |
| <b>Standby Power consumption</b>   | ≤0.5W  |
| <b>Digital features:</b>           | Digitally interactive.<br>Digital text.<br>Digital video broadcasting (DVB) subtitles available.<br>Auto setup.<br>Auto scan for new channels.<br>Now and next programme guide.<br>7 day electronic programme guide (EPG).<br>Top up TV compatible.<br>CI slot.<br>Audio description compatible.   |
| <b>Additional features:</b>        | UHF/VHF tuner;Sleep timer;Parental Guidance;Picture and text<br>Remote control batteries required 2 x AAA (included).<br>ESA Mount Size: 200x200 mm<br>Package Size (WxHxD): 1250x140x790mm<br>Set Size (WxHxD) with Stand: 1116x727x255mm<br>Set Size (WxHxD) without Stand: 1116x674x64mm<br>Package weight : 16.02kg<br>Set weight with stand: 12.88kg<br>Set weight without stand: 11.68kg                             |

\* The part specifications of this TV set provided here are for reference only.  
Differences may occur as product technology is updated.  
Design and specifications are subject to change without notice.

## PRODUCT SPECIFICATION

### 139CM UHD Digital LED TV

|                                    |   |
|------------------------------------|---|
| <b>Television picture quality:</b> | UHD<br>Integrated digital.<br>Screen Size: 139cm<br>Resolution 3840x2160 pixels 60Hz.   |
| <b>TV System:</b>                  | PAL-B/G,SECAM-B/G   |
| <b>Power consumption:</b>          | 180W  |
| <b>DTV Tuner Decoder</b>           | DVB-T, DVB-C, DVB-T2, DVB-S2<br>16/32/64/128/256 QAM modulation<br>MPEG2,MPEG4,H.265  |
| <b>Connectivity:</b>               | 1 Optical port<br>2 USB ports<br>1 RJ45<br>4 HDMI sockets<br>1 VIDEO socket<br>1 L socket<br>1 R socket<br>2 RF sockets<br>1 YPbPr socket<br>1 EARPHONE port<br>1 TF socket<br>1 CI slot<br>Supported Systems:PAL+SECAM<br>Storage channel number: 1000(DTV),100(ATV)<br>TV (RF) :75 $\Omega$ Imbalance<br>AV Video-Input:75 $\Omega$ ,1V-P,RCA<br>AV Audio-Input:20K $\Omega$ ,500mV RMS<br>YPbPr/HDMI Video Input:480i, 576i, 1080i, 4K(HDMI) |
| <b>Sound quality:</b>              | Stereo sound system.<br>2 x 13 watts RMS power output.  |
| <b>Standby Power consumption</b>   | $\leq 0.5W$   |
| <b>Digital features:</b>           | Digitally interactive.<br>Digital text.<br>Digital video broadcasting (DVB) subtitles available.<br>Auto setup.<br>Auto scan for new channels.<br>Now and next programme guide.<br>7 day electronic programme guide (EPG).<br>Top up TV compatible.<br>CI slot.<br>Audio description compatible.  |
| <b>Additional features:</b>        | UHF/VHF tuner;Sleep timer;Parental Guidance;Picture and text<br>Remote control batteries required 2 x AAA (included).<br>ESA Mount Size: 200x200 mm<br>Package Size (WxHxD): 1355x860x143mm<br>Set Size (WxHxD) with Stand: 1229x782x255mm<br>Set Size (WxHxD) without Stand: 1229x730x68mm<br>Package weight : 19.5kg<br>Set weight with stand: 15.3kg<br>Set weight without stand: 14.1kg   |

\* The part specifications of this TV set provided here are for reference only.  
Diferences may occur as product technology is updated.  
Design and specifications are subject to change without notice.

## PRODUCT SPECIFICATION

### 165CM UHD Digital LED TV

|                                    |  |
|------------------------------------|--|
| <b>Television picture quality:</b> | UHD<br>Integrated digital.<br>Screen Size: 165cm<br>Resolution 3840x2160 pixels 60Hz.  |
| <b>TV System:</b>                  | PAL-B/G,SECAM-B/G  |
| <b>Power consumption:</b>          | 200W   |
| <b>DTV Tuner Decoder</b>           | DVB-T, DVB-C, DVB-T2, DVB-S2<br>16/32/64/128/256 QAM modulation<br>MPEG2,MPEG4,H.265   |
| <b>Connectivity:</b>               | 1 Optical port<br>2 USB port<br>1 RJ45<br>4 HDMI sockets<br>1 VIDEO socket<br>1 L socket<br>1 R socket<br>2 RF socket<br>1 YPbPr socket<br>1 EARPHONE port<br>1 TF socket<br>1 CI slot<br>Supported Systems:PAL+SECAM<br>Storage channel number: 1000(DTV),100(ATV)<br>TV (RF) :75 $\Omega$ Imbalance<br>AV Video-Input:75 $\Omega$ ,1V-P,RCA<br>AV Audio-Input:20K $\Omega$ ,500mV RMS<br>YPbPr/HDMI Video Input: 480i, 576i, 1080i, 4K(HDMI) |
| <b>Sound quality:</b>              | Stereo sound system.<br>2 x 13 watts RMS power output.   |
| <b>Standby Power consumption</b>   | $\leq 0.5W$  |
| <b>Digital features:</b>           | Digitally interactive.<br>Digital text.<br>Digital video broadcasting (DVB) subtitles available.<br>Auto setup.<br>Auto scan for new channels.<br>Now and next programme guide.<br>7 day electronic programme guide (EPG).<br>Top up TV compatible.<br>CI slot.<br>Audio description compatible.   |
| <b>Additional features:</b>        | UHF/VHF tuner;Sleep timer;Parental Guidance;Picture and text<br>Remote control batteries required 2 x AAA (included).<br>ESA Mount Size: 400x200 mm<br>Package Size (WxHxD): 1615x1015x185mm<br>Set Size (WxHxD) with Stand: 1448x907x295mm<br>Set Size (WxHxD) without Stand: 1448x857x67mm<br>Package weight : 25.85kg<br>Set weight with stand: 19.7kg<br>Set weight without stand: 14.8kg  |

\* The part specifications of this TV set provided here are for reference only.  
Diferences may occur as product technology is updated.  
Design and specifications are subject to change without notice.

# Haier