Pos I OPERATION

BASE OPERATION

1. Unit start Press ON/OFF on the remote controller, unit starts. Use remote control to turn onand display setting temperature 24.

 
2. Select operation mode COOL button:Cooling mode

DRY button: Dehumidify mode

3. Select temp. setting Press TEMP▲ / TEMP▼ button

TEMP_ Every time the button is pressed, temp. setting increase 1 °C, if kept depressed, it will increase rapidly

TEMP Every time the button is pressed, temp. setting decrease1°C ,if kept depressed, it will decrease rapidly

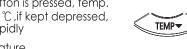


Select a desired temperature.

CANDY CARELINE: 1800 202 9999 E21ATE, PHASE – 3, NEW DELHI - 110020 BUILDING NO. – 1, OKHLA INDUSTRIAL

3. Fan speed selection

 Press button to enter additional options, when cycle display to will flash.And then press enter to FAN function. Press FAN button. For each press, fan speed changes as follows: Remote controller:

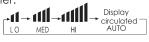

Air conditioner is running under displayed fan speed. When FAN is set to AUTO, the air conditioner automatically adjusts the fan speed according to room temperature.

Operation Mode	Remote Controller	Note
COOL	*	according to roomemperature.
DRY	(In DRY mode , when 4. room temperature becomes lower than temp. setting $+2^{\circ}\mathrm{C}$, unit will run intermittently at LOW speed regardless of FAN setting.
ANF	$[\mathfrak{K}]$	In FAN operation mode , the unit will not operate in COOL or HEAT mode but only in FAN mode, AUTO is not available in FAN mode. And temp, setting is disabled. In FAN mode, sleep operation is not available.

P₀₆ I E-WASTE GUIDELINE MANUAL

Introduction

We at Haier in our continuous efforts of making a future better adopted eco-friendly practices and procedures. We acting towards our social, moral and statutory responsibility towards the environment and sustainable development have pledged to recycle electronic items, such as IV/LED/LCD, reffgreator, AC etc. that are no longer useful. Haier is stepping towards leading a more conservation, and optimization of resources and thereby making environment safer. We request you to donate or utilize take back scheme for your electronic good when it reaches its end-of-life, so that it can be reuse -recycle and reinvent.

"Hazard of e waste on environment and Human Health: The informal method of recycling extends health hazards. Primary and secondary exposure to toxic metals, such as lead, results in diseases like Heart, Liver, Lung & Spleen Damage. Open-air burning of electronic woste, used to retrieve valuable components such as gold, not only causes damages to environment but also to human health. Incineration from burning e-waste creates fine particulate matter, which is linked to heart and respiratory disease. However the above said is only example and the informal way to recycle causes numerous health hazards. During such informal recycling no caultion or care are kept to either secure the environment or human health. The informal method of recycling extended environment hazards too, For example when different e-waste is burnt to extract mosts from it, toxic chemicals are released in to the air, damaging the atmosphere. Such informal ways creates noise, water and air pollution.

policino. II								
Toxic Materials	Birth Defects	Brain Damage	Heart, Liver ,Lung & Spleen Damage	Kidney Damage	Nervous/Reproductive System Damage	Skeletal System Damage		
Barium	~	×	×	~	~	~		
Cadmium	×	~	×	×	×	×		
Lead	×	×	_	×	×	~		
Lithium	×	×	×	×	×	~		
Mercury	×	×	×	×	~	~		
Nickel	×	~	×	×	×	~		
Palladium	×	×	×	×	~	~		
Rhodium	~	~	×	~	~	~		
Silver	×	×	×	×	×	~		

"Why proper handling and management of e-waste:

The electrical and electronic equipment (EEE) have valuable materials and hazardous/toxics substances in their components. The electronic products and electrical equipment after their useful life may not cause any harm if it is stored safely in households/stores. However, if the E-waste is opened-up and attempts are made for retrieval of useful components or material in an un-scientific manner or if the material is alsosed in open, then it may cause health risks and damage to environment. E-waste can be considered as a resource that contains useful material of economic benefit for recovery of plastics, iron, glass, aluminum, copper and precious metals such as silver, gold, platinum, and palladium and lead, cadmium, mercury etc. However, at the same time presence of heavy metals (As. Cd. Hg., Pb etc.) and other toxic substances such as polycholinated biophenyls (PCBs), etched chemicals, etc. may pose risk to health and environment during handling and recovery operations. E-waste is a problem of increasing proportions especially when crude methods are adopted for recovery of useful components from E-waste. Thus, there is a need to encourage OUR SELF for recycling of all useful and valuable material from e-waste so as to conserve the ever depleting natural resources. Electronic component are increasingly made from recycled materials, for example for making new LCDs, more than 50% of indium is sourced by recycling used LCDs. The E-waste thus presents a scenario of urban mining for recovery of ferous/non-ferous/ rare earth metal and precious metal in addition to plastics and glass. However, presence of hazardous and toxic substances in the component of e-waste including collection and recycling/freatment in an environmentally sound manner.

"Management and Effect on sustainable future: Sustainable development as defined by Brundtiland Commission is "development that meets the needs of the present without compromising the ability of future generations to meet their own

istomer responsibility consumers shall ensure that there end of life product/e-waste is channelized through collection center or dealer of authorized producer or dismantler or recycler or through the designated take back serviceprovider of the producer to authorized dismantler or recycler; b) consumers shall ensure that such end-of-life electrical and electronic equipment are not admixed with e-waste containing radioactive material; Electronic Waste Recycling:

Los
Handover/Donate/Give the discarded Electronic Equipment's only at the authorized collection centers.
Drop the discarded Electronic Equipment's only in the bins meant for the Electronic Waste.
Ask the retailer about the Take Back schemes.
Consult the authorized service center as to whether the Electronic Equipment can be repaired or not, before discarding the same.

eighbors and other persons about the hazards of improper disposal or handling or improper recycling

of the Electronic Waste.

• If the unwanted Electronic Equipment still work or can be repaired then consider donating them.

• To minimize our impact on the earth and to protect the environment for future generations return your discarded.

Electronic Equipment's here for safe recycling:

Don'ts

Don't dump the discarded Electronic Equipment's in open or in any Land Fill Site as the same will result in

contaminating the Soil and the ground water.

Don't dispose of the discarded Electronic Equipment's in household bins or Municipal Bins.

Don't sell or give your discarded Electronic Equipment's to any Trash Dealer or Kabadiwala/unauthorized

vendor.

Don't fry to open up the product by yourself for repair or other purposes.

Don't mix the electronic waste into household waste stream.

Don't keep any replaced spare part(s) from the product in exposed area. Always handover such article to service personal so that same can be recycled.

• It the remote controller can't run normally during operation, please remove the Full display or unclear display during operation indicates the batteries have been used up. Please charge batteries.
 If the server of the particular during operation please remove the transfer constraint.

The distance between the signal transmission head and the receiver hole should be within 7m without any obstacle as well.
 When electronic-started type fluorescent lamp or change- over type fluorescent lamp or wireless telephone is installed in the room, the receiver is apt to be disturbed in receiving the signals.

0

ON TIME ON TIME

HEVILH STEED FULLY

(X)

_ TEMp▲

COOF OFFW DEAD

THUROBAUT

0

in receiving the signals, so the distance to the indoor unit should be shorter.

batteries and reload several minutes later.

4.Load the battery,then put on the cover again.

3 Be sonce that the loading is in line with the" + "/"-"; 2 R-03 battenes, resetting key(cylinder);

LOADING OF THE BATTERY

Healthy function is not available for some units.

2.Load the batteries as illustrated.

article to press this button to reset

Myen the remote controller appears

timer and other additional functions. Function: Setting and cancel to the

10. CANCEL/CONFIRM button

₩ ← 🐧 ←

←-- ※:noitonui

8. TEMP display

6. LOCK display

5.FAN SPEED display

4. SWING display

.. Mode display

Po4 | OPERATION

3. Signal sending display

9. EXTRA FUNCTION button

Remote controller 🖄 📆 | 🖉

Y.Additional functions display

→ MIII → MIIII → Display → Circulate

Kemote controller

1.TIMER OFF display/TIMER ON display

► SEMOTE CONTROLLE

apuormal, use a sharp pointed

I. Remove the battery cover;

the remote.

11. RESET button

P₀₇ I E-WASTE GUIDELINE MANUAL

Read the precautions in this manual carefully before operating the unit.

This appliance is filled with R32. Keep this manual where the user can easily find it.

WARNING:



▲ Ask your dealer or qualified personnel to carry out installation work.Do not attempt to install the air conditioner yourself. Improper Installation may result in water leakage, electric shocks, fire or explosion.

▲ Install the air conditioner in accordance with the instructions in this installation manual.

▲ Be sure to use only the specified accessories and parts for installation work. ▲ Install the air conditioner on a foundation strong enough to withstand the weight of the unit.

▲ Electrical work must be performed in accordance with relevant local and national regulations and with instructions in this installation manual, Be sure to use a dedicated power supply circuit only. The wiring method should be in line with the local wiring

standard.The type of connecting wire is H07RN-F.

• Use a cable of suitable length, Do not use tapped wires or an extension lead as

this may cause overheating, electric shocks, fire or explosion.

All the cables shall have got the local authentication certificate. During installation, when the connecting cables break off, it must be assured that the grouding wire in the last case for the connecting cables for the cable cables for the cables are called the cables and cables for the cables are cables for the cables are called the called the cables are called the cables are called the called

is the last one to be broken off. ▲ If refrigerant gas leaks during installation, ventilate the area immediately.oxic gas may be produced if the refrigerant comes into contact with fire, and explosion may

▲ After completing installation, check for refrigerant gas leakage.

▲ When installing or relocating the air conditioner, be sure to bleed the refrigerant circuit to ensure it is free of air, and use only the specified refrigerant (R32)

▲ Make sure ground connection is correct and reliable. Do not earth the unit to a

utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks. ▲ Be sure to install an earth leakage circuit explosion-proof breaker.

The breaker of the air conditioner should be all-pole switch and explosion-proof. The distance between its two contacts should not be no less than 3mm. Such means for disconnection must be incorporated in the wiring.

▲ Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

▲ The appliance must be stored in a room without continuously operating ignition sources, the radius of the storage area should be no less than 2.5 m (for example: open flames, an operating gas appliance or an operating electric heater). ▲ Do not pierce or burn.

Be aware that refrigerants may not contain an odour.

▲ The appliance must be installed, operated and stored in a room with a floor area larger than 3m The room should be well ventilated.

▲ Comply with national gas regulations. ▲ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised


to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be madé by chilḋre'n.

▲ The air conditioner can not be discarded or scrapped Randomly customer service personnel of Haier to scrap in order to obtain the correct disposal methods. A Reusable mechanical connectors and flared joints are not allowed indoor.


to the product purchased. Actual inlet grille may vary from the one shown in the manual according

AND ELECTRICAL WIRING

(4) DRAIN HOSE

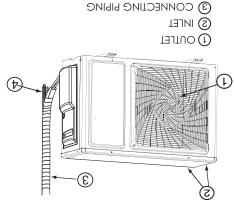



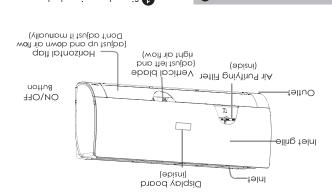

INDOOR UNIT

 $oldsymbol{Q}$ Do not place flower vase or water containers on the top of the unit. Do not place any objects on or climb on the unit.

CANDY AIR CONDITIONER WARRANTY CARD

Candy (here –in-after referred to as "the company")hereby offers the following warranty to

the domestic purchaser commencing from the date of purchase.

The company, at its own sole discretion, will free of charge repair or replace any defective part

or parts which prove to be defective in workmanship and/or materials and not due to abnormal

Only

1. The warranty term will commence and shall automatically terminate on completion of warranty period from the date of invoice.

2. he company is not liable for any delay in servicing due to reasons beyond the control of the company or any of

its authorized service centers. 3. Parts replaced or repaired under this warranty are warranted throughout the remaining period of the original warranty.

4. It is entirely left to the company's discretion to repair/replace parts at the site of installation or at the authorized

6. This warranty shall not, in any case, extend towards payment of any monetary consideration whatsoever or return

The company may repair/replace parts free of cost during the warranty period. This warranty does not cover any

8. The parts shall be replaced by functionally operating! equivalent material only and not necessarily with brand new ones and are likely to be different from the one originally fitted. The parts thus removed shall be taken back

9. The company reserves the right to retain any part or component replaced at its sole discretion during the

10. In no event the company or its authorized service center shall be liable for any consequential damages or

a. If the product has been installed/serviced/repaired/opened or tampered by any unauthorized personnel/ technician.
b. If defects arise/caused by accidents, alteration, misuse, neglect, substitution of original components with

spurious/non-genuine components, attacked by household pest/rodents, flood, earthquake, lightning and /

e. The complete warranty card is not presented to authorized service person at the time of service of the product. f. The product is not operated according to Instruction given in user manual. Defect or cause by improper

g. Any repair work is carried out by the person other than authorized service personal.
h. Defects caused by due to causes beyond control like lightening or abnormal voltage, acts of God are while

in transit to service center from purchase residence.
i. Warranty is not valid in case the serial no. is deleted, defected or alter or not mentioned on warranty card.
j. If customer name, address, serial no. ,DOP, Model & dealer seal & signature not available clearaly.

12. Any change of location or change in the ownership during the warranty period must be intimated in writing to

13. The company's employees or its authorized representatives have no authority to vary the terms of this warranty.

14. This warranty is effected in New Delhi and claims, if any, shall be made only before the courts having jurisdiction in New Delhi and no claims shall be made against the company outside New Delhi not withstanding that the

15. This offer entitles customer to enjoy free of cost an extended warranty during the warranty period on select models as above mentioned.

16. Labour, Gas charging and Transportation charges to be paid by customer accordingly during the extended

warranty period of 108 months.

17. After the expiry of the warranty and extended warranty period, the customer has to bear service charges and

19. After the expiry of this warranty and/ or extended warranty period, the customer has to bear service charges

and taxes as 'applicable.

Note: - All consumer electronic products as listed in Schedule II of the E-waste Handling & Management Rules, 2011

Serial No:_____Date of Purchase:_____Model No:____

18. Don't switch off the AC for long duration. If switch off then it could cause sealed system blockage or

should be disposed of according to the procedure laid under the said Rules.

Dealer Seal/Candy Seal & Signature: ___

Customer Name: Address:

service center of the company. 5. This warranty shall be strictly limited to the repairs or replacement of defective parts specified in the warranty

Excise Duty, central or sales tax, octroi and other local taxes or levies on the components/parts.

resulting flability, damage or loss arising directly or indirectly out of any defect in the product.

1. This warranty is not valid in case of the following events:

WARRANTY PERIOD

___ Address: __

Period on Compresso

120 months

PARTS NOT COVERED

Plastic/Aesthetic Parts

Serial No:_____Date of Purchase:_____Model No:____

Customer Name:

or improper usage by the customer/consumer.

TERMS AND CONDITIONS OF WARRANTY:

or any other act of God/natural calamities. The product is shifted outside India.

appliances may have been sold or delivered elsewhere.

joint corrosion, which can result a leak.

CANDY

d. The warranty card & Invoice is not completed at the time of Purchase

reckless use which shall be determined by the authorized service person.

k. Warranty card is confined to the 1st Purchaser of the product only, it is not transferable.

on Product

Dealer Seal/Candy Seal & Signature:

Comprehensive Period

12 months

CANDY

MODEL SERIES

Inverter Model

Do not place animals or plants in the direct path of the air flow. **O** Do not pour water onto the unit for cleaning.

 $oldsymbol{Q}$ Check good condition of the installation stand. $oldsymbol{Q}$ Do not install the unit near a fireplace or other heating apparatus.

 $oldsymbol{Q}$ Do not operate the switch with wet hand.

Take fresh air occasionally especially when gas appliance is running

Do not use for the purpose of storage of food, art work, precise equipment, breeding, or cultivation.

SNOITUAD !

Do not try to repair or reconstruct by yourself. Do not channel the air flow directly at people, especially at infants or the aged. cold and so on. **Q** Do not start or stop the operation by disconnecting the power supply

Do not insert objects into the air inlet or outlet. Take care not to damage the power supply cord. Do not use power supply cord in a bundle.

2.Do not install in the place where there is any possibility of inflammable gas leakage around the unit.
3.Do not get the unit exposed to vapor or oil steam. l. Do not use power supply cord extended or connected in halfway.

Connect power supply cord to the outlet completely.

Use the proper voltage. Check proper installation of the drainage securely. Use an exclusive power source with a circuit breaker.

When abnormality such as burnt-small found, immediately stop the

MARNING I or ignorance may hurt or seriously injure the user.

V Instructions with this sign should be well attended by the user. Any misuse canse damage to the product or to personal safety of the user. safety of the user. Operational rules should be strictly followed, or it may Instructions with this sign is related to safe use of the product an personal Instructions with this sign is prohibited, it may cause damage to the product or personal safety of the user. 0

works may cause electric shock, fire, water leakage. Do not attempt to install the air conditioner by yourself because improper Please call Sales/Service Shop for the Installation.

Poz | CAUTIONS

AIR CONDITIONER

BRING HOME EUROPEAN STYL

User Manual C18F13INV C18\$4IN **C12S3IN**

• Please read this operation manual before using the air conditioner. • Keep this operation manual for future reference.

NOND

Style with outstanding, easy smart solutions & high quality With its Unique range of Products, Candy offers great European embedded home appliances to make users' daily life easier. a full range of independent and

brand in Europe. For 75 years, Candy has been providing Candy born in Italy in 1945, is a leading white goods

BRAND INTRODUCTION

Pot | BRAND INTRODUCTION

E-WASTE GUIDELINE MANUAL - NOITA 939C PARTS AND FUNCTION -CAUTIONS -----PRODUCTS / 02

> **BRAND INTRODUCTION / 01** ► CONTENTS

Pos | PARTS AND FUNCTION

Pot CONTENTS