3. Run the foam-removing spinning.
   (a) Open the outer cover of the spin tub.
   (b) Set the water-filling selector control rod at the "SPIN" side. Fill water for about 1 minute. If the water quantity filled is too large, the water may flow out from the wash tub side. Please twist the water tab to limit the water filling.
   (c) Close the outer cover of the spin tub. Spin for 1-2 minutes.



Rinsing

Rinse with water-filling

1. Put the laundries into the wash tub. Select suitable wash program according to the laundries.
2. Adjust the water level
   Set the water level with water level adjusting lever according to the laundries quantity. Then fill suitable water continuously.
3. Rinse
   Adjust the wash timer to 5-7 minutes to do rinsing.

(Repeat the midway spinning and rinsing with stored water for 2-3 times)

Rinse with stored water

1. Put the laundries into the wash tub. Select suitable wash speed according to the laundries.
2. Fill water to preset water level.
3. Rinse
   Adjust the wash timer to 2-3 minutes to do rinsing.

- When the laundries quantity is a few, please use "Standard" Wash program. If you use "Strong" Wash program, it may splash.

Spinning

1. Put the laundries into the spin tub evenly and smoothly.
2. Press the Spinner Cap in the tub properly. Close the inner and outer cover of the spin tub.
3. Turn off water supply before spin time selection. Select suitable spin time according to the laundries, and do spinning.
4. During spinning, if there's abnormal sound, it is generally due to slanting placement of the laundries. Please stop the machine and re-order the laundries.

- In spinning, it will pause the work if you open the outer cover of the spin tub. Close it to resume the spinning.

DISPOSAL AFTER WASHING

- After using the machine, please clean the lint and foreign materials of the lint filter and over flow filter in time. Otherwise it may result in lint deposition on washed clothes.
- Please first pull off the power plug from the receptacle before cleaning.

Cleaning the lint Filter

- It must be cleaned in time after each using.

1. Take off the lint filter
   Put hand at the indicated position.
   Push down to take it off.(See to Figure 1) Pull the lower end of lint filter rear cover outward to disassemble it from the lint filter front cover. Remove lint completely with clear water.
2. Clean the lint
   Put it in water and clean while it is still wet. (See to Figure 2)
3. Install the lint filter
   After cleaning , insert the bottom of the lint filter (marked with "down side ") into the overflow filter. then push the upper part of the filter in (marked with "up side"). (See to Figure 3)



Cleaning the overflow filter

- Too much lint on the overflow filter will influence the normal usage of the machine. Please clean it regularly.
- Take off the overflow filter.
  As indicated in the figure, nip the elastic fixing claw and pull it to the direction of the arrow to take it off.
- For fixing overflow filter, first align overflow filter from opposite side of elastic fixing claw, and then press elastic fixing claw to fix overflow filter properly.



Cleaning the overflow filter

1. Pull overflow filter outside for cleaning.



2. Take off the corrugation pipe.
   Dismantle the upper part of the corrugation pipe inside the overflow filter (as indicated in Figure1)
3. Cleaning the overflow filter.
   Clean the lint around the filter and surrounding visible area, flush with tap water.
4. Install the overflow filter.
   (a)Install the corrugation pipe.
   (b)Insert the mounting plate at the bottom of the filter into the valve cover.
   (c) Hang up the hook at the left upper side.
   (d)Push the upper part in as indicated in Figure 2.

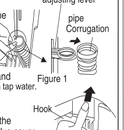

Disposal of the complete unit

- Wipe the complete unit with soft cloth twisted dry.
- Wipe with neutral detergent if too dirty.
- Do not wash it directly by water.

- After washing, dismount the water inlet hose.
- Do not store water in the tub for long period. Discharge the water immediately after each using.
- Pull off the power plug and hang up the power cord.
- Hang up the drain hose. Wipe off the water drops on the surface and inside the tub with clean soft cloth.
- Open the cover of the wash tub and the inner/outer cover of the spin tub for some time (about one hour), then close them.

When the remained water is frozen

- Prevent the freezing(be sure to discharge the water completely after using)
- After complete draining, set the " WASH SELECTOR" at "STRONG" or "STANDARD". If it is set at "DRAIN", it will be rather difficult for the frozen water to melt.
- When the water is frozen Pour hot water below 50°C into the wash tub to soak it completely. Then turn the pulsator with hands gently. Please confirm the drainage can work normally before next using.

BASIC TROUBLESHOOTING BY YOURSELF

Phenomena	The reason
The machine does not act.	• Is there power failure? • Is the power plug loose? • Is the pulsator twisted by foreign materials?
The draining does not work.	• Is the drain hose put down? • Is the drain hose frozen? • Is the drain hose blocked by foreign material? • Are there laundries falling to the outer side of the spin tub?
There's abnormal sound during washing	• Are there hair pin, coins or metal items brought inside the tub?
There's abnormal sound and violent vibration during spinning.	• Is the machine slanting? • Is the spinner cap pressed evenly? • Are there laundries falling to the outer side of the spin tub? • Are the laundries in spin tub too much?
There may be some water flowing out of the drain hose in the first use of the machine.	• It is the water remained in the factory inspection of performance.

PACKING LIST

Name	Quantity	Description
User's manual	One piece	In Accessories Bag
Warranty manual	One piece	Attached In User Manual
Water inlet hose	One piece	In Accessories Bag
Lint filter	One piece	Fitted in Machine
Spinner Cap	One piece	In Accessories Bag
Twin Tub Washing Machine	One set	

SPECIFICATION

Capacity Series	Water Level / Water Quantity	Injection Pressure (MPa)	Rated Voltage Frequency	Wash / Spin Capacity
CTT65187W	Max. 48L, Med. 41L, Min. 33L	0.02 - 0.2	220V ~ / 50Hz	6.5kg / 4.5kg

CANDY WASHING MACHINE WARRANTY CARD

CANDY

Customer Name: ..... Address: .....
Serial No: ..... Date of Purchase: ..... Model No: .....
Dealer Seal & Signature: .....

CANDY (here –in-after referred to as "the company") hereby offers
The following warranty to the domestic purchaser commencing from the date of purchase. The company, at its own sole discretion, will free of charge repair or replace any defective part or parts which prove to be defective in workmanship and/or materials and not due to abnormal or improper usage by the customer/consumer.

MODEL SERIES	WARRANTY PERIOD		PARTS NOT COVERED
	Comprehensive Period on Product	Period on Motor Only	
Twin Tub Model	24 months	60 months	Plastic, Top Lids, Drain Pipe, Inlet Pipe, Lint Filter
Top Loading Model	24 months	60 months	

TERMS AND CONDITIONS OF WARRANTY:
1) This warranty will automatically terminate on the expiry of the warranty period from the date of delivery.
2) The Company is not liable for any delay in servicing due to reasons beyond the control of the Company or any of its authorised service centres.
3) Parts replaced or repaired under this warranty are warranted throughout the remaining of the original warranty period.
4) It is entirely left to the Company's discretion to repair/replace parts at the site of installation or at the authorised service centre of the Company.
5) This warranty shall be strictly limited to the repairs or replacement of defective parts specified in the warranty. This warranty shall not cover any consequential or resulting liability.
6) This warranty shall not, in any case, extend towards payment of any monetary consideration whatsoever or replacement or return of the product.
7) The Company may repair/supply parts free of cost during the warranty period. This warranty does not cover any Excise duty, Central or Sales tax, Octroi and other local taxes or levies on the components/parts.
8) The parts shall be replaced by functionally operating equivalent material only and not with brand new ones and are likely to be different from the one originally fitted. The parts thus removed shall be taken back by the Company.
9) The Company reserves the right to retain any part or component replaced at its sole discretion during the warranty period.
10) In no event the Company or its authorised service centre be liable for any consequential damages or resulting liability, damage or loss arising directly or indirectly out of any defect in the product.
11) This warranty is not valid in case of the following events:
   a) If the Product has been Installed/Serviced/Repaired/Opened or Tampered by any unauthorised personnel.
   b) If defects arise/caused by accidents, alteration, misuse, neglect, substitution of original components with spurious/non-genuine components, attacked by household pest/rodents, fire flood, earthquake, lightning and/or any other act of God/natural calamities.
   c) The product is shifted outside India.
12) (a) For any service under this warranty beyond city/town/municipal limits from the Company/authorised service centre, a fixed charge of Rs. 50 will be collected from the customer in addition to the actual to and fro charges by the shortest route
   (b) Service charges applicable after expiry of comprehensive warranty.
13) Any change of location or change in the ownership during the warranty period must be intimated in writing to the company.
14) The Company's employees or its authorised representatives have no authority to vary the terms of this warranty.
15) This warranty is effected in New Delhi and claims, if any, shall be made only before the courts having jurisdiction in New Delhi and no claim shall be made against the Company outside New Delhi not withstanding that the Appliance may have been sold or delivered elsewhere.

Note: - All consumer electronic products as listed in Schedule II of the E-waste Handling & Management Rules, 2011 should be disposed of according to the procedure laid under the said Rules.

CANDY

Customer Name: ..... Address: .....
Serial No: ..... Date of Purchase: ..... Model No: .....
Dealer Seal & Signature: .....

E-waste Guideline Manual

Introduction
We at Candy in our continuous efforts of making a future better adopted eco-friendly practices and procedures. We acting towards our social, moral and statutory responsibility towards the environment and sustainable development have pledged to recycle electronic items, such as TV/LED/LCD, refrigerator, washing machine, etc. that are no longer useful. Candy is stepping towards leading a more conservation and optimization of resources and thereby making environment safer. We request you to donate or utilize take back scheme for your electronic good when it reaches its end-of-life, so that it can be reuse -recycle and reinvent.

"Hazard of e waste on environment and Human Health :-
The informal method of recycling extends health hazards. Primary and secondary exposure to toxic metals, such as lead, results in diseases like Heart, Liver, Lung & Spleen Damage. Open-air burning of electronic waste, used to retrieve valuable components such as gold, not only causes damages to environment but also to human health. Incineration from burning e-waste creates fine particulate matter, which is linked to heart and respiratory disease. However the above said is only example and the informal way to recycle causes numerous health hazards. During such informal recycling no caution or care are kept to either secure the environment or human health. The informal method of recycling extended environment hazards too. For example when different e-waste is burnt to extract metals from it, toxic chemicals are released in to the air, damaging the atmosphere. Such informal ways creates noise, water and air pollution.

E WASTE TOXIC COMPONENT & THEIR DAMAGE TO HUMAN HEALTH

Toxic Materials	Birth Defects	Brain Damage	Heart, Liver, Lung & Spleen Damage	Kidney Damage	Nervous/ Reproductive System Damage	Skeletal System Damage
Barium	✓	X	X	✓	✓	✓
Cadmium	X	✓	X	X	X	X
Lead	X	X	✓	X	X	✓
Lithium	X	X	X	X	X	✓
Mercury	X	X	X	X	✓	✓
Nickel	X	✓	X	X	X	✓
Palladium	X	X	X	X	✓	✓
Rhodium	✓	✓	X	✓	✓	✓
Silver	X	X	X	X	X	✓

Without safe recycling, most of these toxic components will end in land fill-poisoning soil and water.

"Why proper handling and management of e-waste :-
The electrical and electronic equipment (EEE) have valuable materials and hazardous/toxics substances in their components. The electronic products and electrical equipment after their useful life may not cause any harm if it is stored safely in households/stores. However, if the E-waste is opened-up and attempts are made for retrieval of useful components or material in an un-scientific manner or if the material is disposed in open, then it may cause health risks and damage to environment. E-waste can be considered as a resource that contains useful material of economic benefit for recovery of plastics, iron, glass, aluminum, copper and precious metals such as silver, gold, platinum, and palladium and lead, cadmium, mercury etc. However, at the same time presence of heavy metals (As, Cd, Hg, Pb etc.) and other toxic substances such as polychlorinated biphenyls (PCBs), etched chemicals, etc. may pose risk to health and environment during handling and recovery operations. E-waste is a problem of increasing proportions especially when crude methods are adopted for recovery of useful components from E-waste.
Thus, there is a need to encourage OUR SELF for recycling of all useful and valuable material from e-waste so as to conserve the ever depleting natural resources. Electronic component are increasingly made from recycled materials, for example for making new LCDs, more than 50% of indium is sourced by recycling used LCDs. The E-waste thus presents a scenario of urban mining for recovery of ferrous/non-ferrous/ rare earth metal and precious metal in addition to plastics and glass. However, presence of hazardous and toxic substances in the component of e-waste necessitates environmentally sound management of e-waste including collection and recycling/treatment in an environmentally sound manner.

"Management and Effect on sustainable future:-
Sustainable development as defined by Brundtland Commission is "development that meets the needs of the present without compromising the ability of future generations to meet their own needs."
The e-waste since a long time had been seen as an easy and cheapest source of metals. However due to lack of proper consideration for such source of metals as well as proper methods of recycling in India, we sent our e-waste to the improper channel/scrap vendor and thereby participated in degrading the environment. Moreover, through this improper method of extraction of metals we till date had wasted approximately 40% of the precious metals and simultaneously caused damage to our environment. If we opt the proper way to extract metals through proper channel of recycling then we can achieve approximately 90% of extraction rate of our metals as well as a better way to save our environment. However, if today while selling off our material to improper channel we will not think about our sustainable future then it is for sure that the coming generations will be facing crisis of the metals.

Customer responsibility
a) consumers shall ensure that there end of life product/e-waste is channelized through collection center or dealer of authorized producer or dismantler or recycler or through the designated take back serviceprovider of the producer to authorized dismantler or recycler;
b) consumers shall ensure that such end-of-life electrical and electronic equipment are not admixed with e-waste containing radioactive material;

Electronic Waste Recycling:
Do's
- Handover/Donate/Give the discarded Electronic Equipment's only at the authorized collection centers.
- Drop the discarded Electronic Equipment's only in the bins meant for the Electronic Waste.
- Ask the retailer about the Take Back schemes.
- Consult the authorized service center as to whether the Electronic Equipment can be repaired or not, before discarding the same.
- Tell your neighbors and other persons about the hazards of improper disposal or handling or improper recycling of the Electronic Waste.
- If the unwanted Electronic Equipment still work or can be repaired then consider donating them.
- To minimize our impact on the earth and to protect the environment for future generations return your discarded Electronic Equipment's here for safe recycling :

Don'ts
- Don't dump the discarded Electronic Equipment's in open or in any Land Fill Site as the same will result in contaminating the Soil and the ground water.
- Don't dispose of the discarded Electronic Equipment's in household bins or Municipal Bins.
- Don't sell or give your discarded Electronic Equipment's to any Trash Dealer or Kabadiwala/unauthorized vendor.
- Don't try to open up the product by yourself for repair or other purposes.
- Don't mix the electronic waste into household waste stream.
- Don't keep any replaced spare part(s) from the product in exposed area. Always handover such article to service personal so that same can be recycled.

BUILDING NO. – 1,OKHLA INDUSTRIAL
ESTATE, PHASE – 3,NEW DELHI - 110020
CANDY CARELINE: 1800 202 9999

CANDY
Efficient Accessible Italian Vigorous

WASHING MACHINE

User Manual
CTT65187W

- Please read this manual carefully before using washing machine.
- Retain it for future reference.

CONTENTS

CONTENTS

BRAND INTRODUCTION / 01
KNOW YOUR WASHING MACHINE 01
SAFETY SIGN & PRECAUTIONS 02
PRODUCT INSTALLATION GUIDELINES 03
PREPARATION BEFORE WASHING 04
THE MUSTS IN WASHING 04
DETERGENT USAGE 05
CANDY WASHING MACHINE WARRANTY CARD 08
E-WASTE GUIDELINE MANUAL 09

BRAND INTRODUCTION

BRAND INTRODUCTION

CANDY Group — a professional household appliances manufacturer from Italy. Since its launch in 1945, CANDY Group is enjoying high reputation in the international market. Candy, as a Italian brand, is with famous of gastheic elements and fashion design addressing young people', affiliates for home living and lifestyle.
Thank you for purchasing this product.

KNOW YOUR WASHING MACHINE

Prohibition: Contents marked with that symbol are action forbidden to perform. Performing of those actions may result in damage of the machine or endanger the personal safety of the user.

Warning: Contents marked with that symbol are related to the safety of the product in the contents, otherwise it may cause damage of the machine or endanger the personal safety of the user.

KNOW YOUR WASHING MACHINE

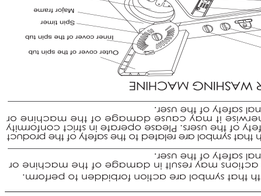

Reference machine snap for all SA models

Due to continuous improvements in our products, specifications shown here are subject to change without prior notice.
* Available in selected models only.

Please check if the power receptacle has good earthing condition before using to guarantee your safety.

*Motor used in machine is having Thermal Overload protection. So, in case of excessive heating, motor might trip and stop for cooling. In such case, it is suggested to wait till the temperature goes down before starting.

SAFETY SIGN & PRECAUTIONS

Do not put hands into the running machine. It is dangerous even if the rotation is slow. Take special care to children.	Do not decompose, repair or alter the machine by yourself.
Do not put any hot or heavy items (such as the kettle with hot water) on the washing machine.	Do not wash laundries with volatile metallals (such as thinner, petrol etc.).
Handicapped or children shall use the machine in close supervision.	Keep the machine away from direct sunlight and heat source like heater.
Do not put the machine at damp place like the bathroom. Never wash it with water. Do not place wet laundries on the control panel.	Do not use water hotter than 50°C.
In case the washing machine is installed on ground with carpet, do not block the ventilation holes with carpet. Ventilation holes at the bottom of the washing machine	Do not wash water-proof laundries like raincoat, bike covers etc. to avoid abnormal vibrations in spinning.
Do not let the machine share one receptacle with other electric appliances. If the power plug is damaged, or the plugging into the receptacle is loose, do not use the plug any more.	
Please plug in the power cord on special receptacle with rated voltage. Be sure to use single-phase three pins receptacle. The earthing terminal of the receptacle must be earthed reliably. If possible,please adopt electric leakage protector.	The washing machine must be positioned so that the plug is accessible. Be sure to pull the plug off close the water faucet in following cases: power failure, delivering the machine, selling the machine idle or cleaning the machine.

PRODUCT INSTALLATION GUIDELINES

Please install and adjust the machine according to the requirement of the manual.
It is very important for your safety and for operating the machine correctly

1. Please put down the drain hose before washing, and connect the water inlet pipe properly.
2. It is suggested to use fearless washing powder.
3. Please don't use the washer in the environment below 0°C. If the washer is below 0°C, The washer's water inlet system and draining system will be frozen, that will damage the whole machine. If the washer are below 0°C please ensure that the washer is placed under the room temperature for 2-4 hours before using.
4. To protect your laundry and washing machine, please take out all coins, buttons, keys hairpins and other foreign materials from the clothes before washing.
5. Install the appliance on flat hard floor.
6. Never try to correct any unevenness in floor with piece of wood, cardboard or similar material under the appliance.

INSTALLATION OF DRAIN HOSE

The drainage shall be smooth with the drain hose.

1. The drain hose should be installed at height less than 10cm for smooth drainage.
2. Do not trample or press the drain hose
3. If the drain hose is too long, cut it at mid point. To make smooth drainage,cut the front end of the hose sianclingly. But the hook of drain pipe can not be installed again.
4. If extra drain hose is needed,please make separate purchase. The inner diameter of the extra hose shall not less than 30mm, and the length shall not exceed 1.5m.
5. If the extra hose is too long,cut it either at A or at B point.

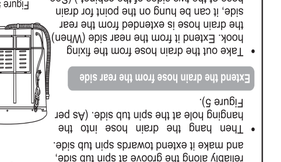

Note: The instructions for appliances connected to the water mains by detachable hose-sets shall state that the new hose-sets supplied with the appliance are to be used and that old hoses-sets should not be reused.

INSTALLATION OF WATER FAUCET

The new hose-sets supplied with the appliance are to be used and that old hoses-sets should not be reused



- Insert the water inlet hose into the Water inlet on the control panel directly- (pull it out to disinantle it)
- Select water level according to the quantity of the laundries.
- Set the water level adjusting lever to needed line.



PREPARATION BEFORE WASHING

Preparation before washing
1.Connect the water hose.
2.Confirm that the washing machine is earthed reliably.
3.Put down the drain hose.
4.Install the washing machine on the horizontal surface properly.
Fitting to do so may result in vibration and abnormal noise.

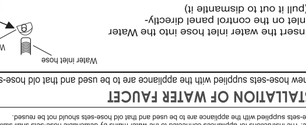

The musts in washing

- The capacity of washing and spinning of the machine refer to the lagest weight of the standard laundries under dry condition that can be washed or spinned at one time. One time washing quantity shall be lower than the rated capacity.
- The thickness, size, type of the cloth will influence the washing capacity. It is suitable for one time washing to put a reasonable amount of laundries and the laundries can be turned round in washing.
- Do not add the high water level for laundries less than 2kg, as to avoid splashing of water.

DETERGENT USAGE

How to use the Washing Powder
1. Fill small quantity of water to dolute the powder.
2. Put washing powder, nr. Or 30 seconds to dissolve it completely.
3. Put in the laundries. Select suitable water level.
- The instant dissolving of the washing powder.
- Prepare warm water of 30°C and instruction on the washing powder
- Dosage of different washing powder is different. Please refer to the detail dosage.

2 Add the powder while stirring to fully dissolve it.
- The powder is more prone to dolute seconds than the detergent. Therefore please use it with proper quantity.

How to use the whitener
1. Water or decided level. Dolute the whitener with container. Put it slowly into the washing tub.
- Avoid using whitener on the laundries that are prone to lose color: the laundries dirtiy.
- The whitener shall not touch the laundries directly.
- For powder whitener, please dissolve it before using.

WASHING SEQUENCE



Wash

1. Water fill selection
   (a) Set fill selection to "Wash side", (Figure 1)
   (b) Adjust water level rod to a position as needed.
2. Fill water and add dissolved powder detergent until water reaches a suitable level. (Figure 2)
3. Put in the wash load, and begin to wash to dispense detergent uniformly.

4. Wash selector knob (Figure 3)
   Select the washing program according to the laundries.
5. Select the washing time according to the laundries. (Figure 4)
6. After washing, the buzzer will ring. (As per special models)
   Set the "WASH SELECTOR" at "DRAIN". (Figure 5)



Midway spinning

1. Put the laundries into spin tub evenly and smoothly.
2. Spin (2) Put the spinner Cap in properly.
   Please put in the spinner Cap properly even if the laundries quantity is small.
   (b) Close the inner on outer cover of the spin tub.



(c) Spin for 1-2 minutes.

HOW TO CHANGE DIRECTION OF DRAIN HOSE

- Figure 1 indicates the ex factory installation position of the drain hose.

Extend the drain hose from the side of spin tub

- Take off the drain hose from the hanging hook of the cabinet. Pull the drain hose out the drain hose from the two fixing hooks. (As per figure 2)
- Rotate the drain hose fixing hook for 90° to take it out from the installation hole (As per figure 3).

- Install the two drain hose fixing hooks taken out into the installation hole at the other side of the base frame (to aim at the installation hole accurately you can lean the washing machine forward slightly). Then rotate for 90°(As per figure 4).
- Pull the fixing hook outwards slightly. Hang the drain hose into the fixing hooks reliably along the groove at spin tub side, make it extend towards spin tub side.
- Then hang the drain hose into the hanging hole at the spin tub side. (As per Figure 5).

Extend the drain hose from the rear side

- Take out the drain hose from the fixing hook. Extend it from rear side (When) the drain hose is extended from the rear side, it can be hung on the point for drain hose at the two sides of the cabinet. (See to Figure 6).

CANDY WASHING MACHINE WARRANTY CARD

CANDY

Customer Name: ..... Address: .....
Serial No: ..... Date of Purchase: ..... Model No: .....
Dealer Seal & Signature: .....

CANDY (here –in-after referred to as "the company") hereby offers
The following warranty to the domestic purchaser commencing from the date of purchase. The company, at its own sole discretion, will free of charge repair or replace any defective part or parts which prove to be defective in workmanship and/or materials and not due to abnormal or improper usage by the customer/consumer.

MODEL SERIES	WARRANTY PERIOD		PARTS NOT COVERED
	Comprehensive Period on Product	Period on Motor Only	
Twin Tub Model	24 months	60 months	Plastic, Top Lids, Drain Pipe, Inlet Pipe, Lint Filter
Top Loading Model	24 months	60 months	

TERMS AND CONDITIONS OF WARRANTY:
1) This warranty will automatically terminate on the expiry of the warranty period from the date of delivery.
2) The Company is not liable for any delay in servicing due to reasons beyond the control of the Company or any of its authorised service centres.
3) Parts replaced or repaired under this warranty are warranted throughout the remaining of the original warranty period.
4) It is entirely left to the Company's discretion to repair/replace parts at the site of installation or at the authorised service centre of the Company.
5) This warranty shall be strictly limited to the repairs or replacement of defective parts specified in the warranty. This warranty shall not cover any consequential or resulting liability.
6) This warranty shall not, in any case, extend towards payment of any monetary consideration whatsoever or replacement or return of the product.
7) The Company may repair/supply parts free of cost during the warranty period. This warranty does not cover any Excise duty, Central or Sales tax, Octroi and other local taxes or levies on the components/parts.
8) The parts shall be replaced by functionally operating equivalent material only and not with brand new ones and are likely to be different from the one originally fitted. The parts thus removed shall be taken back by the Company.
9) The Company reserves the right to retain any part or component replaced at its sole discretion during the warranty period.
10) In no event the Company or its authorised service centre be liable for any consequential damages or resulting liability, damage or loss arising directly or indirectly out of any defect in the product.
11) This warranty is not valid in case of the following events:
   a) If the Product has been Installed/Serviced/Repaired/Opened or Tampered by any unauthorised personnel.
   b) If defects arise/caused by accidents, alteration, misuse, neglect, substitution of original components with spurious/non-genuine components, attacked by household pest/rodents, fire flood, earthquake, lightning and/or any other act of God/natural calamities.
   c) The product is shifted outside India.
12) (a) For any service under this warranty beyond city/town/municipal limits from the Company/authorised service centre, a fixed charge of Rs. 50 will be collected from the customer in addition to the actual to and fro charges by the shortest route
   (b) Service charges applicable after expiry of comprehensive warranty.
13) Any change of location or change in the ownership during the warranty period must be intimated in writing to the company.
14) The Company's employees or its authorised representatives have no authority to vary the terms of this warranty.
15) This warranty is effected in New Delhi and claims, if any, shall be made only before the courts having jurisdiction in New Delhi and no claim shall be made against the Company outside New Delhi not withstanding that the Appliance may have been sold or delivered elsewhere.

Note: - All consumer electronic products as listed in Schedule II of the E-waste Handling & Management Rules, 2011 should be disposed of according to the procedure laid under the said Rules.

CANDY

Customer Name: ..... Address: .....
Serial No: ..... Date of Purchase: ..... Model No: .....
Dealer Seal & Signature: .....

PRODUCT INSTALLATION GUIDELINES

Please install and adjust the machine according to the requirement of the manual.
It is very important for your safety and for operating the machine correctly

1. Please put down the drain hose before washing, and connect the water inlet pipe properly.
2. It is suggested to use fearless washing powder.
3. Please don't use the washer in the environment below 0°C If the washer is below 0°C, The washer's water inlet system and draining system will be frozen, that will damage the whole machine. If the washer are below 0°C please ensure that the washer is placed under the room temperature for 2-4 hours before using.
4. To protect your laundry and washing machine, please take out all coins, buttons, keys hairpins and other foreign materials from the clothes before washing.
5. Install the appliance on flat hard floor.
6. Never try to correct any unevenness in floor with piece of wood, cardboard or similar material under the appliance.

INSTALLATION OF DRAIN HOSE

The drainage shall be smooth with the drain hose.

1. The drain hose should be installed at height less than 10cm for smooth drainage.
2. Do not trample or press the drain hose
3. If the drain hose is too long, cut it at mid point. To make smooth drainage,cut the front end of the hose sianclingly. But the hook of drain pipe can not be installed again.
4. If extra drain hose is needed,please make separate purchase. The inner diameter of the extra hose shall not less than 30mm, and the length shall not exceed 1.5m.
5. If the extra hose is too long,cut it either at A or at B point.

Note: The instructions for appliances connected to the water mains by detachable hose-sets shall state that the new hose-sets supplied with the appliance are to be used and that old hoses-sets should not be reused.

INSTALLATION OF WATER FAUCET

The new hose-sets supplied with the appliance are to be used and that old hoses-sets should not be reused

- Insert the water inlet hose into the Water inlet on the control panel directly- (pull it out to disinantle it)
- Select water level according to the quantity of the laundries.
- Set the water level adjusting lever to needed line.

PREPARATION BEFORE WASHING

Preparation before washing
1.Connect the water hose.
2.Confirm that the washing machine is earthed reliably.
3.Put down the drain hose.
4.Install the washing machine on the horizontal surface properly.
Fitting to do so may result in vibration and abnormal noise.

The musts in washing

- The capacity of washing and spinning of the machine refer to the lagest weight of the standard laundries under dry condition that can be washed or spinned at one time. One time washing quantity shall be lower than the rated capacity.
- The thickness, size, type of the cloth will influence the washing capacity. It is suitable for one time washing to put a reasonable amount of laundries and the laundries can be turned round in washing.
- Do not add the high water level for laundries less than 2kg, as to avoid splashing of water.

DETERGENT USAGE

How to use the Washing Powder
1. Fill small quantity of water to dolute the powder while stirring to fully dissolve it.
2. Put washing powder, nr. Or 30 seconds to dissolve it completely.
3. Put in the laundries. Select suitable water level.
- The instant dissolving of the washing powder.
- Prepare warm water of 30°C and instruction on the washing powder
- Dosage of different washing powder is different. Please refer to the detail dosage.

2 Add the powder while stirring to fully dissolve it.
- The powder is more prone to dolute seconds than the detergent. Therefore please use it with proper quantity.

How to use the whitener
1. Water or decided level. Dolute the whitener with container. Put it slowly into the washing tub.
- Avoid using whitener on the laundries that are prone to lose color: the laundries dirtiy.
- The whitener shall not touch the laundries directly.
- For powder whitener, please dissolve it before using.

WASHING SEQUENCE

Overflow sign
Water inlet
Water filling control handle
Wash timer
(To set to below 2 minute, first set to 1 minute then turn it back, it can